

Pinspot Bar

User Manual

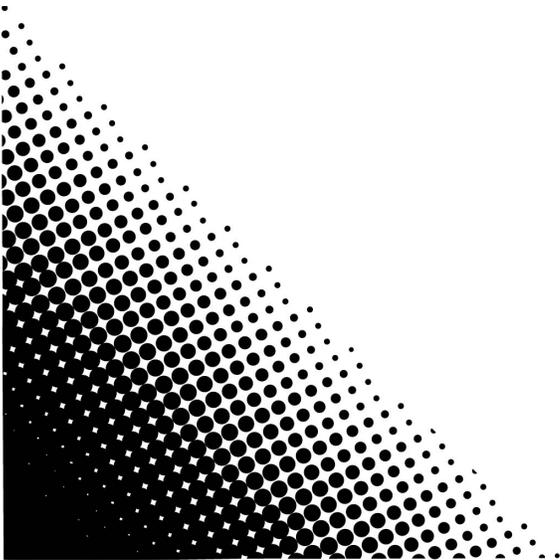
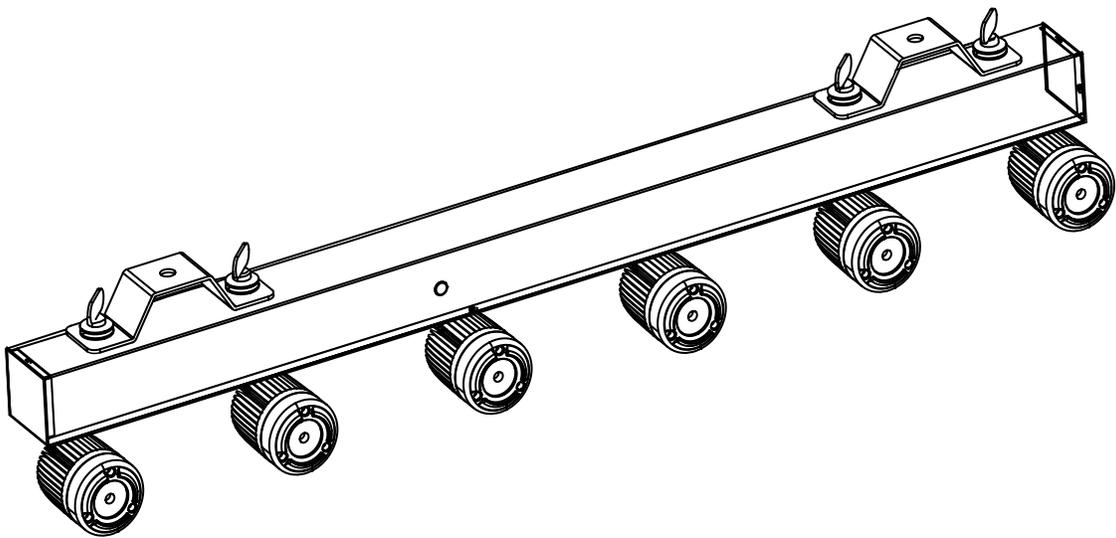


TABLE OF CONTENTS

1. Before You Begin	1
What Is Included	1
Unpacking Instructions.....	1
Claims	1
Text Conventions	1
Symbols	1
Disclaimer	1
Intellectual Property	1
Safety Notes.....	2
2. Introduction.....	3
Product Overview.....	3
Product Dimensions.....	3
3. Setup.....	4
AC Power	4
Fuse Replacement.....	4
Mounting	5
Orientation.....	5
Rigging.....	5
4. Operation.....	6
Control Panel Operation.....	6
Menu Map	6
Configuration (DMX)	7
Starting Address.....	7
D-Fi USB Connectivity	7
Configuration (D-Fi USB)	7
DMX Channel Assignments and Values	8
11Ch.....	8
6Ch.....	8
1Ch.....	8
Configuration (Standalone)	9
Automatic Program	9
Auto program speed	9
Sound-Active Program	9
Sound sensitivity.....	9
IRC-6 Infrared Remote Control	10
IRC-6 Operation	10
Master/Slave Mode	11
Master/Slave Mode (D-Fi USB).....	11
Slave products:	11
Master product:.....	11
5. Maintenance.....	12
Product Maintenance	12
6. Technical Specifications.....	13
Returns	14
Contact Us.....	15

1. Before You Begin

What Is Included

- Pinspot Bar
- Power cord
- 2 Omega brackets
- 6x 10° diffusers
- 6x 20° diffusers
- 6x 2700 K CTO filters
- Quick Reference Guide

Unpacking Instructions

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

Claims

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Text Conventions

Convention	Meaning
1–512	A range of values
50/60	A set of values of which only one can be chosen
Settings	A menu option not to be modified
<ENTER>	A key to be pressed on the product's control panel
ON	A value to be entered or selected

Symbols

Symbol	Meaning
	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from www.chauvetdj.com.

Intellectual Property

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

© Copyright 2019 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

CHAUVET, the Chauvet logo, and Pinspot Bar are registered trademarks or trademarks of Chauvet & Sons LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Patent Pending.

Safety Notes



- This product is not intended for permanent installation.
- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Always disconnect the product from the power source before cleaning or replacing the fuse.
- Avoid direct eye exposure to the light source while the product is on.
- Make sure the power cord is not crimped or damaged.
- Never disconnect the product from power by pulling or tugging on the cord.
- If mounting the product overhead, always secure to a fastening device using a safety cable.
- Make sure there are no flammable materials close to the product when operating.
- Do not touch the product's housing when operating because it may be very hot.




- The voltage of the outlet to which you are connecting this product must be within the range stated on the decal or rear panel of the product.
- The product is for indoor use only! (IP20) To prevent risk of fire or shock, do not expose the product to rain or moisture.
- Always install the product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Be sure that no ventilation slots on the product's housing are blocked.
- Never connect the product to a dimmer or rheostat.
- Make sure to replace the fuse with another of the same type and rating.
- Never carry the product from the power cord or any moving part. Always use the bracket.
- The maximum ambient temperature is 104 °F (40 °C). Do not operate this product at higher temperatures.
- In the event of a serious operating problem, stop using the product immediately.
- Do not open this product. It contains no user-serviceable parts.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.





Keep this User Manual for future use. If the product is sold to someone else, be sure that they also receive this document.

2. Introduction

Product Overview

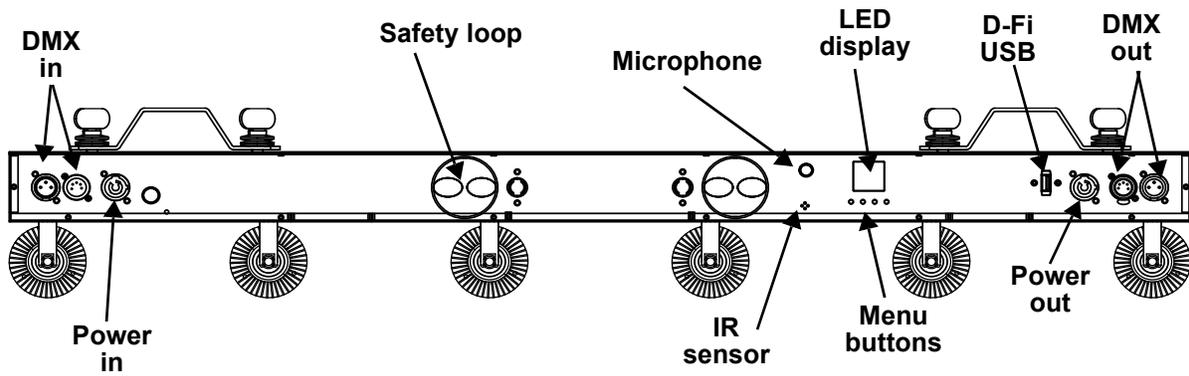

Product Dimensions

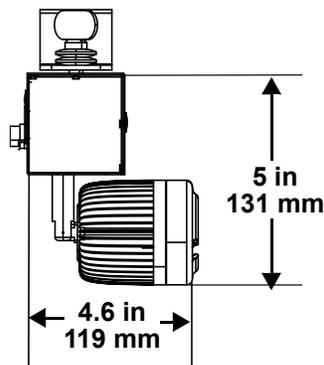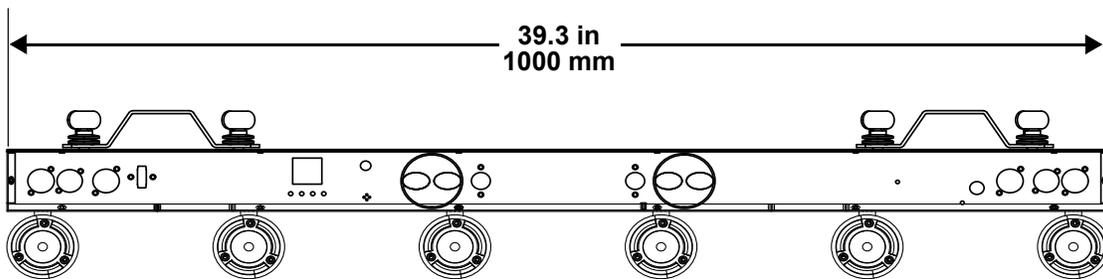

3. Setup

AC Power

The Pinspot Bar has an auto-ranging power supply, and it can work with an input voltage range of 100 to 240 VAC, 50/60 Hz.

To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart.

The listed current rating indicates the product's average current draw under normal conditions.



- **Always connect the product to a protected circuit (a circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.**
- **To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.**



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

Fuse Replacement

1. Disconnect the product from power.
2. Wedge the tip of a flat-head screwdriver into the slot of the fuse holder.
3. Pry the fuse holder out of the housing.
4. Remove the blown fuse from the holder and replace with a fuse of the exact same type and rating.
5. Insert the fuse holder back in place and reconnect power.



Disconnect the product from the power outlet before replacing the fuse.

Mounting

Before mounting the product, read and follow the safety recommendations indicated in the [Safety Notes](#).


Orientation

The Pinspot Bar may be mounted in any position; however, make sure adequate ventilation is provided around the product.

Rigging

- Before deciding on a location, always make sure there is easy access to the product for maintenance and programming.
- Make sure adequate ventilation is provided around the product.
- Make sure that the structure or surface onto which you are mounting the product can support the product's weight. (see the [Technical Specifications](#))
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power linking cables to reach.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the knobs.

Mounting Diagram

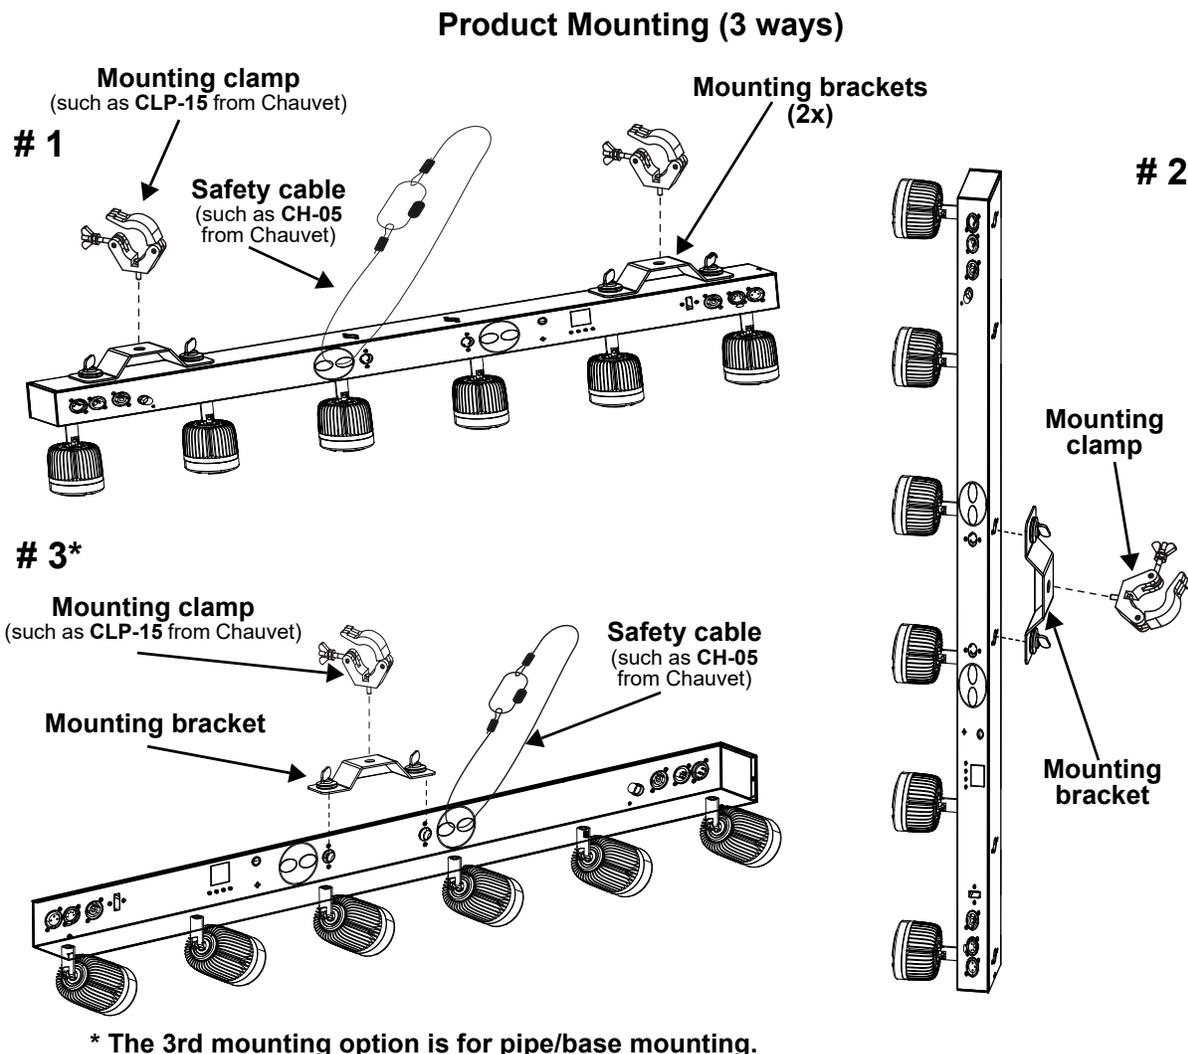

4. Operation

Control Panel Operation

To access the control panel functions, use the four buttons located underneath the display. Refer to the [Product Overview](#) to see the button locations on the control panel.

Button	Function
<MENU>	Exits from the current menu or function
<UP>	Navigates upwards through the menu list or increases a selected numeric value
<DOWN>	Navigates downwards through the menu list or decreases a selected numeric value
<ENTER>	Enables the currently displayed menu or sets a selected value into the selected function

Menu Map

Mode	Programming Levels		Description
Auto	Program	01–11	Automatic programs
	Speed	01–99	Speed for auto programs
	Fade	YES NO	Auto fade after program
Sound	Program	01–10	Sound-active programs
	Sens	01–99	Sound sensitivity
Manual	Pod1	000–255	Manually adjust the dimmer per pod or for all pods
	Pod2		
	Pod3		
	Pod4		
	Pod5		
	Pod6		
	All pods		
	Strobe	000–099	Strobe rate
DMX	Address	001–502	Select DMX address (highest channel restricted to personality chosen)
	Channel	1Ch	1-channel DMX mode
		6Ch	6-channel DMX mode
11Ch		11-channel DMX mode	
Slave	Slave1		Select slave mode
	Slave2		
	Slave3		
Settings	IR	ON	Turn infrared on or off
		OFF	
	DMX Fail	Auto	Revert to auto mode
		Black	Blackout
		Hold	Hold the last DMX signal received
		Sound	Revert to sound mode
Screen	ON	Screen display always on	
	OFF	Turn off display after 30 seconds of inactivity	
Reset			Reset the product to factory default settings

Configuration (DMX)

The Pinpoint Bar works with a DMX controller. Information about DMX is in the CHAUVET DMX Primer, which is available from the Chauvet website:
http://www.chauvetlighting.com/downloads/DMX_Primer_rev05_WO.pdf.

Starting Address

When selecting a starting DMX address, always consider the number of DMX channels the selected DMX mode uses. If you choose a starting address that is too high, you could restrict the access to some of the product's channels.

The Pinpoint Bar uses up to 11 DMX channels, which defines the highest configurable address as **502**. If you are not familiar with the DMX protocol, download the DMX Primer from www.chauvetdj.com.

To select the starting address, do the following:

1. Press **<MENU>** repeatedly until **1Ch**, **6Ch**, or **11Ch** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to select the starting address, from **001–502**.
4. Press **<ENTER>**.

D-Fi USB Connectivity

The Pinpoint Bar is able to become a D-Fi wireless receiver/transmitter with the use of the D-Fi USB from Chauvet DJ. Simply set the product's DMX Personality and DMX Address, set the DIP switch D-Fi receiving/transmitting channel, then plug it into the D-Fi USB port.



WARNING! DO NOT plug anything other than a D-Fi USB into the USB port. Doing so may cause damage to the product.

Once plugged in, the D-Fi USB will take over the product. Wired DMX, manual display control/menu buttons, and IRC-6 will be unavailable until you unplug the D-Fi USB. The priority levels are:

1. D-Fi USB
2. Wired DMX
3. IRC-6 remote control
4. Manual digital display/menu buttons


Configuration (D-Fi USB)

1. Set the DMX personality and DMX address on your product.
2. Use the chart provided to set BOTH:
 - the channel, and then
 - the **Receiving** or **Transmitting** option.

	1	2	3	4	T/R		1	2	3	4	T/R	
Channel 1	<input type="checkbox"/>	Channel 1	<input type="checkbox"/>	Transmitting								
Channel 2	<input type="checkbox"/>	Channel 2	<input type="checkbox"/>									
Channel 3	<input type="checkbox"/>	Channel 3	<input type="checkbox"/>									
Channel 4	<input type="checkbox"/>	Channel 4	<input type="checkbox"/>									
Channel 5	<input type="checkbox"/>	Channel 5	<input type="checkbox"/>									
Channel 6	<input type="checkbox"/>	Channel 6	<input type="checkbox"/>									
Channel 7	<input type="checkbox"/>	Channel 7	<input type="checkbox"/>									
Receiving Channel 8	<input type="checkbox"/>	Channel 8	<input type="checkbox"/>									
Channel 9	<input type="checkbox"/>	Channel 9	<input type="checkbox"/>									
Channel 10	<input type="checkbox"/>	Channel 10	<input type="checkbox"/>									
Channel 11	<input type="checkbox"/>	Channel 11	<input type="checkbox"/>									
Channel 12	<input type="checkbox"/>	Channel 12	<input type="checkbox"/>									
Channel 13	<input type="checkbox"/>	Channel 13	<input type="checkbox"/>									
Channel 14	<input type="checkbox"/>	Channel 14	<input type="checkbox"/>									
Channel 15	<input type="checkbox"/>	Channel 15	<input type="checkbox"/>									
Channel 16	<input type="checkbox"/>	Channel 16	<input type="checkbox"/>									

DMX Channel Assignments and Values

Pinspot Bar Zones for DMX Control

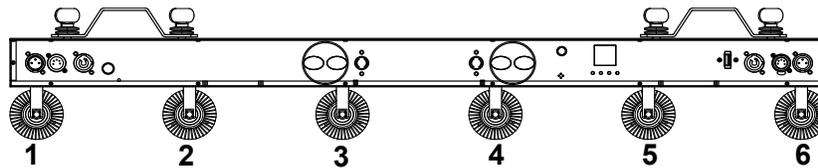

11Ch

Channel	Function	Value	Percent/Setting
1	Pod 1	000 ⇄ 255	0–100%
2	Pod 2	000 ⇄ 255	0–100%
3	Pod 3	000 ⇄ 255	0–100%
4	Pod 4	000 ⇄ 255	0–100%
5	Pod 5	000 ⇄ 255	0–100%
6	Pod 6	000 ⇄ 255	0–100%
7	Strobe	000 ⇄ 255	0–100%
8	Auto/Sound programs (Each auto/sound program has Fade and Snap functions)	000 ⇄ 034	No function
		035 ⇄ 054	Auto program 1 / Sound 1
		055 ⇄ 074	Auto program 2 / Sound 2
		075 ⇄ 114	Auto program 3 / Sound 3
		115 ⇄ 134	Auto program 4 / Sound 4
		135 ⇄ 154	Auto program 5 / Sound 5
		155 ⇄ 174	Auto program 6 / Sound 6
		175 ⇄ 194	Auto program 7 / Sound 7
		195 ⇄ 214	Auto program 8 / Sound 8
		215 ⇄ 234	Auto program 9 / Sound 9
235 ⇄ 255	Auto program 10 / Sound 10		
9	Auto Speed	000 ⇄ 250	Auto program speed, slow to fast
10	Program mode	000 ⇄ 127	Auto program (Channel 8 will run in auto mode)
		128 ⇄ 255	Sound program (Channel 8 will run in sound mode)
11	Fade	000 ⇄ 127	Snap function (Channel 8 will activate snap function)
		128 ⇄ 255	Fade function (Channel 8 will activate fade function)

6Ch

Channel	Function	Value	Percent/Setting
1	Pod 1	000 ⇄ 255	0–100%
2	Pod 2	000 ⇄ 255	0–100%
3	Pod 3	000 ⇄ 255	0–100%
4	Pod 4	000 ⇄ 255	0–100%
5	Pod 5	000 ⇄ 255	0–100%
6	Pod 6	000 ⇄ 015	0–100%

1Ch

Channel	Function	Value	Percent/Setting
1	All pods	000 ⇄ 255	0–100%

Configuration (Standalone)

Set the product in the standalone mode to control without a DMX controller.



Never connect a product that is operating in any standalone mode to a DMX string connected to a DMX controller. Products in standalone mode may transmit DMX signals that could interfere with the DMX signals from the controller.

Automatic Program

To run a program on the Pinspot Bar, follow the instructions below.

1. Press **<MENU>** repeatedly until **Auto** shows on the display.
2. Press **<ENTER>**.
3. Select **Program**.
4. Press **<ENTER>**.
5. Use **<UP>** or **<DOWN>** to select an automatic program, from **01–11**.
6. Press **<ENTER>**.

Auto program speed

To adjust the auto program speed on the Pinspot Bar, do the following:

1. Press **<MENU>** repeatedly until **Auto** shows on the display.
2. Press **<ENTER>**.
3. Select **Speed**.
4. Press **<ENTER>**.
5. Use **<UP>** or **<DOWN>** to increase or decrease the program speed, from **01–99**.
6. Press **<ENTER>**. The product will return to the last selected.

Sound-Active Program

To run a sound-active program on the Pinspot Bar, follow the instructions below.

1. Press **<MENU>** repeatedly until **Sound** shows on the display.
2. Press **<ENTER>**.
3. Select **Program**.
4. Press **<ENTER>**.
5. Use **<UP>** or **<DOWN>** to select a sound-active program, from **01–10**.
6. Press **<ENTER>**.

Sound sensitivity

To adjust the sound sensitivity on the Pinspot Bar, do the following:

1. Press **<MENU>** repeatedly until **Sound** shows on the display.
2. Press **<ENTER>**.
3. Select **Sens**.
4. Press **<ENTER>**.
5. Use **<UP>** or **<DOWN>** to increase or decrease the sound sensitivity, from **01–99**.
6. Press **<ENTER>**. The product will return to the last selected mode.




The product will only respond to low frequencies of music (bass and drums).

IRC-6 Infrared Remote Control

The Pinspot Bar is compatible with the IRC-6 infrared remote control from Chauvet. To enable or disable the IR mode on the Pinspot Bar, follow the instructions below:

1. Press **<MENU>** repeatedly until **Settings** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to select **IR**.
4. Press **<ENTER>**.
5. Press **<UP>** or **<DOWN>** to select **ON** or **OFF**.
6. Press **<ENTER>**.

IRC-6 Operation

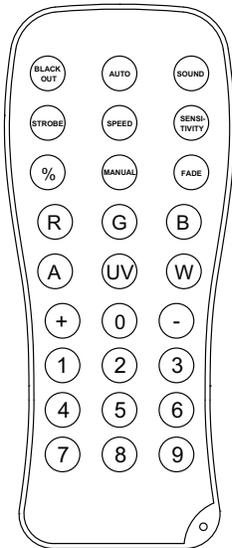

Automatic Mode

Automatic mode will enable you to run the automatic programs on the product.

To turn on Automatic mode:

1. Press **<AUTO>** on the IRC-6.
2. Press **<AUTO>** repeatedly to cycle through the auto programs, or use **<+>** or **<->** to select the desired program.

To select a fading program:

1. Press **<FADE>** on the IRC-6.

To adjust the speed of the automatic program:

1. Press **<SPEED>** on the IRC-6.
2. Press **<+>** or **<->** to increase or decrease the speed of the program.

Sound-Active Mode

Sound-Active mode will enable the product to respond to the music.

To turn on Sound-Active mode:

1. Press **<SOUND>** on the IRC-6.
2. Press **<SOUND>** repeatedly to cycle through the auto programs, or use **<+>** or **<->** to select the desired program.

To adjust the sound sensitivity in Sound-Active mode:

1. Press **<SENSITIVITY>** on the IRC-6.
2. Press **<+>** or **<->** to increase or decrease the sound sensitivity.

Master/Slave Mode

The Master/Slave mode allows a single Pinspot Bar product (the “master”) to control the actions of one or more Pinspot Bar products (the “slaves”) without the need of a DMX controller. The master product will be set to operate in standalone or with the IRC-6, while the slave products will be set to operate in Slave mode. Once set and connected, the slave products will operate in unison with the master product.

Configure the products as indicated below.

Slave products:

1. Press **<MENU>** repeatedly until **11Ch** shows on the display.
2. Press **<ENTER>**.
3. Set the DMX address to **001**.
4. Connect the DMX input of the first slave product to the DMX output of the master product.
5. Connect the DMX input of the subsequent slave products to the DMX output of the previous slave product.
6. Finish setting and connecting all the slave products.

Master product:

1. Press **<MENU>** repeatedly until **Slave** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to select **Slave1**.
4. Press **<ENTER>**.
5. Set the master product to operate in standalone or IR mode.
6. Make the master product the first product in the DMX daisy chain.



- **Configure all the slave products before connecting the master to the daisy chain.**
- **Never connect a DMX controller to a DMX string configured for Master/Slave operation because the controller may interfere with the signals from the master.**
- **Do not connect more than 31 slaves to the master.**

Master/Slave Mode (D-Fi USB)

The D-Fi USB allows a single Pinspot Bar product (the “master”) to control the actions of one or more Pinspot Bar products (the slaves) without the need of a DMX controller or DMX cables. The master (transmitter) product will be set to operate in either standalone mode or with the footswitch, whereas the slave (receiver) products will be set to operate in slave mode. Once set and connected, the slave products will operate in unison with the master product. Configure the products as indicated below:

Slave products:

1. Press **<MENU>** repeatedly until **1Ch**, **6Ch**, or **11Ch** shows on the display.
2. Press **<ENTER>** to accept.
3. Set the DMX address to **001**.
4. Set D-Fi USB to receive on a specific channel, **1–16**.
5. Plug in the D-Fi USB.
6. Finish setting and configuring all the slave products.

Master product:

1. Press **<MENU>** repeatedly until the DMX personality the slaves are set to shows on the display.
2. Press **<ENTER>** to accept.
3. Set the DMX address to **001**.
4. Set the master to operate in either Automatic or Sound-Active mode.
5. Set the D-Fi USB to transmit on the D-Fi channel the slaves are receiving on.
6. Plug in the D-Fi USB.



- **All products must be set to the same DMX personality, DMX address, and D-Fi channel.**
- **Configure all the slave products before configuring the master to transmit.**
- **Never connect a DMX controller to a D-Fi channel configured for Master/Slave operation because the controller may interfere with the signals from the master.**

5. Maintenance

Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean your lighting products at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

1. Unplug the product from power.
2. Wait until the product is at room temperature.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
5. Apply the solution directly to a soft, lint-free cotton cloth or a lens-cleaning tissue.
6. Softly drag any dirt or grime to the outside of the transparent surface.
7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.

6. Technical Specifications

Dimensions and Weight

Length	Width	Height	Weight
39 in (1000 mm)	4.6 in (119 mm)	5 in (131 mm)	9.4 lb (4.3 kg)

Note: Dimensions in inches are rounded.

Power

Power Supply Type	Range	Voltage Selection
Switching (internal)	100 to 240 VAC, 50/60 Hz	Auto-ranging

Parameter	120 V, 60 Hz	230 V, 50 Hz
Consumption	171 W	191 W
Operating current	1.4 A	0.8 A
Power-linking current (products)	8 A (8 products)	8 A (13 products)
Fuse	T 3.15 A, 250 V	T 3.15 A, 250 V

Power I/O	U.S./Worldwide	UK/Europe
Power input connector	IEC	IEC
Power output connector	Edison	IEC
Power cord plug	Edison (U.S.)	Local plug

Light Source

Type	Color	Quantity	Power	Current	Lifespan
LED	Warm white	6	15 W	3.6 A	50,000 hours

Photometrics

Beam Angle	Field Angle	Illuminance @ 2 m
5°	11°	7,707 lux

Thermal

Maximum External Temperature

104 °F (40 °C)

DMX

I/O Connector	Channel Range
3-pin XLR	1, 6, or 11

Ordering

Product Name	Item Code	UPC Number
Pinspot Bar	10031660	781462220082



Returns

In case you need to get support or return a product:

- If you are located in the U.S., contact Chauvet World Headquarters.
- If you are located in the U.K. or Ireland, contact Chauvet Europe Ltd.
- If you are located in Benelux, contact Chauvet Europe BVBA.
- If you are located in France, contact Chauvet France.
- If you are located in Germany, contact Chauvet Germany.
- If you are located in Mexico, contact Chauvet Mexico.
- If you are located in any other country, DO NOT contact Chauvet. Instead, contact your local distributor. See www.chauvetdj.com for distributors outside the U.S., U.K., Ireland, Benelux, France, Germany, or Mexico.



If you are located outside the US, UK, Ireland, Benelux, France, Germany, or Mexico, contact your distributor of record and follow their instructions on how to return Chauvet products to them. Visit our website www.chauvetdj.com for contact details.

Call the corresponding Chauvet Technical Support office and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause for the return.

To submit a service request online, go to www.chauvetdj.com/service-request.

Send the merchandise prepaid, in its original box, and with its original packing and accessories. Chauvet will not issue call tags.

Clearly label the package with the RMA number. Chauvet will refuse any product returned without an RMA number.



Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Before sending the product, clearly write the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).

Contact Us

General Information	Technical Support
Chauvet World Headquarters	
Address: 5200 NW 108th Ave. Sunrise, FL 33351 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084	Voice: (844) 393-7575 Fax: (954) 756-8015 Email: chauvetcs@chauvetlighting.com Website: www.chauvetdj.com
Chauvet Europe Ltd	
Address: Unit 1C Brookhill Road Industrial Estate Pinxton, Nottingham, UK NG16 6NT Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110	Email: UKtech@chauvetlighting.eu Website: www.chauvetdj.eu
Chauvet Europe BVBA	
Address: Stokstraat 18 9770 Kruishoutem Belgium Voice: +32 9 388 93 97	Email: BNLtech@chauvetlighting.eu Website: www.chauvetdj.eu
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59	Email: FRtech@chauvetlighting.fr Website: www.chauvetdj.eu
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20	Email: DEtech@chauvetlighting.de Website: www.chauvetdj.eu
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 690-2010	Email: servicio@chauvet.com.mx Website: www.chauvetdj.mx

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., U.K., Ireland, Mexico, France, Germany, or Benelux, contact the dealer of record.