
# COLORdash Ballen-Quad 12

## **User Manual**



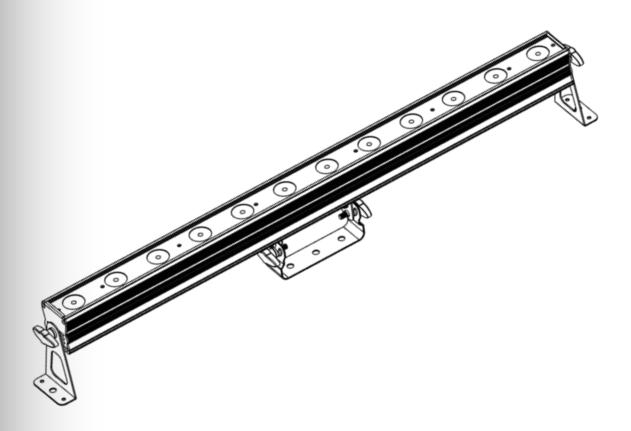



### **Edition Notes**

The COLORdash Batten-Quad 12 User Manual Rev. 5 covers the description, safety precautions, installation, programming, operation, and maintenance of the COLORdash Batten-Quad 12. Chauvet released this edition of the COLORdash Batten-Quad 12 User Manual in January 2017.

Trademarks CHAUVET is a registered trademark of CHAUVET & Sons LLC. (d/b/a CHAUVET or Chauvet). The CHAUVET logo in its entirety including the CHAUVET name and the dotted triangle, and all other trademarks in this manual pertaining to services, products, or marketing statements are owned or licensed by Chauvet. Any other product names, logos, brands, company names, and other trademarks featured or referred to within this document are the property of their respective trademark holders.

### **Copyright Notice**

Chauvet owns the content of this User Manual in its entirety, including but not limited to pictures, logos, trademarks, and resources.

© Copyright 2017 Chauvet. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

**Document Printing** 

For better results, print this document in color, on letter size paper (8.5 x 11 in), doublesided. If using A4 paper (210 x 297 mm), configure your printer to scale the content accordingly.

Intended Audience Any person in charge of installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility for any errors or omissions in this document. Chauvet reserves the right to revise and make changes to the content of this document without obligation that Chauvet notify any person or company of such revision or changes. This does not in any way constitute a commitment by Chauvet to make such changes. Chauvet may issue a revision of this manual or a new edition to incorporate such changes.

**Document Revision** 

The COLORdash Batten-Quad 12 User Manual Rev. 5 supersedes all previous versions of this manual. Discard any older versions of this manual you may have, whether in printed or electronic format, and replace with this version.



## **Table of Contents**

1. Before You Begin	1
What is Included	
Claims	
Manual Conventions	
Symbols	
Safety Notes	2
Personal Safety	2
Mounting and Rigging	
Power and Wiring	2
Operation	2
Expected LED Lifespan	2
2. Introduction	3
Description	3
Features	
Overview	
Dimensions	
3. Setup	
·	
AC Power	-
AC Plug	
Fuse Replacement	
Power Linking	
DMX Linking	
DMX Modes	
Master/Slave Connectivity	
Mounting	
Orientation	
Rigging	
4. Operation	9
Control Panel Description	9
Control Options	
Programming	
DMX Personality	
DMX Control	
Static Color	
Auto Programs	11
Auto Test	11
Master/Slave	
Dimmer Curves	
Software Information	
Fixture Hours	
Backlight	
White Balance	
Menu Map	
Menu Map (cont.)	
DMX Values	
52Ch	
COLORdash Batten-Quad 12 Sections for DMX Control	
DMX Values (cont.)	
52Ch (cont.)	
48Ch	
DMX Values (cont.)	
<del></del>	

### Table of Contents



DMX Values (cont.)	
DMX Values (cont.)	
DMX Values (cont.)	
6 Ch	
4 Ch	
5. Technical Information	
Returns	
Technical Specifications	
Contact Us	25



### 1. Before You Begin

### What is Included ...

- COLORdash Batten-Quad 12
- Neutrik® powerCON® power cord
- 2 Trunnions
- Warranty card
- Quick Reference Guide

Claims Carefully unpack the product immediately and check the box to make sure all the parts are in the package and are in good condition.

> If the box or the contents (the product and included accessories) appear damaged from shipping or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

> For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

#### **Manual Conventions**

Convention	Meaning			
1–512	A range of values in the text			
50/60	A set of mutually exclusive values in the text			
<set></set>	A button on the product's control panel			
Settings	A product function or a menu option			
MENU>Settings	A sequence of menu options			
1–10	A range of menu values from which to choose in a menu			
Yes/No	A set of two mutually exclusive menu options in a menu			
ON	A unique value to be entered or selected in a menu			

### **Symbols**

Symbols	Meaning
<u>^</u>	Critical installation, configuration, or operation information. Failure to comply with this information may cause the product not to work, damage third-party equipment, or cause harm to the operator.
$\bigcirc$	Important installation or configuration information. Failure to comply with this information may keep the product from working.
	Useful information.



The term "DMX" used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.



### **Safety Notes**

Read all the following Safety Notes before working with this product. These notes include important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained Chauvet certified technicians. Do not open the housing or attempt any repairs.





- · Avoid direct eye exposure to the light source while the product is on.
- · Always disconnect this product from its power source before servicing.
- · Always connect this product to a grounded circuit to avoid the risk of electrocution.
- Do not touch this product's housing during operation because it may be very hot.

# Mounting and Rigging

- DO NOT operate this product outdoors or in any location where dust, excessive heat, water, or humidity may affect it. (IP20)
- CAUTION: When transferring product from extreme temperature environments, (e.g. cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Make sure there are no flammable materials close to this product while it is operating.
- When hanging this product, always secure to a fastening device using a safety cable

### **Power and Wiring**

- Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- Never connect this product to a dimmer pack or rheostat.
- Never disconnect this product by pulling or tugging on the power cable.

#### **Operation**

- Do not operate this product if you see damage on the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- · Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate this product at a higher temperature.
- · In case of a serious operating problem, stop using this product immediately!



# In the unlikely event that your Chauvet product may require service, contact Chauvet Technical Support.

# Expected LED Lifespan

LEDs gradually decline in brightness over time, mostly because of heat. Packaged in clusters, LEDs exhibit higher operating temperatures than in ideal, single-LED conditions. For this reason, using clustered LEDs at their fullest intensity significantly reduces the LEDs' lifespan. Under normal conditions, this lifespan can be 40,000 to 50,000 hours. If extending this lifespan is vital, lower the operating temperature by improving the ventilation around the product and reducing the ambient temperature to an optimal operating range. In addition, limiting the overall projection intensity may also help to extend the LEDs' lifespan.



### 2. Introduction

### **Description**

 
COLORdash Batten-Quad 12 is a linear wash fixture with 12 individually controllable quad-color RGBA LEDs that produce any variation of white, as well as richly saturated colors, due to the inclusion of amber LEDs. It maintains an even pixel pitch when used in multiples, either stacked in an array using the optional CBB6 bracket or lined up end-to-end. Setup is easy when using the hanging bracket, floor trunnions, 3- and 5-pin DMX connectors, and power linking.

### **Features**


- 4, 6, 10, 48 or 52 quad-color LED wash product
- Operating modes:
  - 4-channel: RGBA control
  - · 6-channel: RGBA, dimmer, strobe
  - 10-channel: RGBA, dimmer, strobe, color macro, white balance, auto programs, dimmer speed, auto speed
  - 48-channel: RGBA pixel control
  - 52-channel: RGBA pixel control, dimmer, strobe, auto programs, auto speed
- · Built-in auto and custom programs via DMX or Master/Slave
- · Metal construction for added durability
- · Individual pixel control
- Silent flicker-free operation
- · Mount multiple units stacked or end-to-end to maintain pixel pitch




### **Overview**



### **Front View**

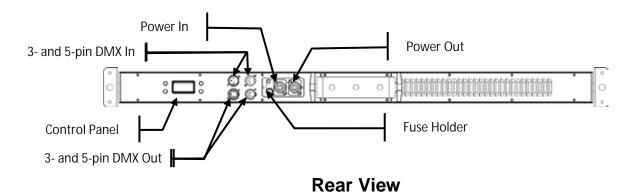


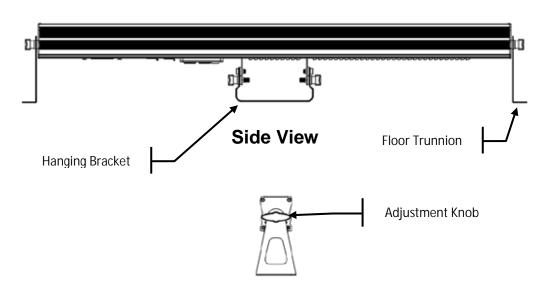



**End Cap View** 



### **Dimensions**

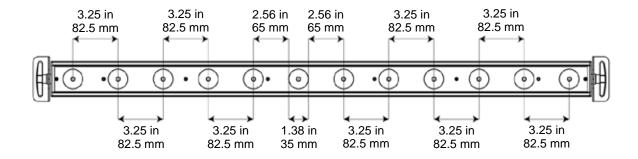

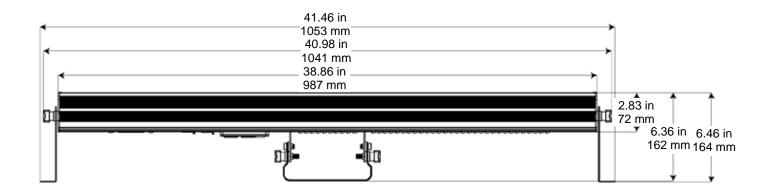

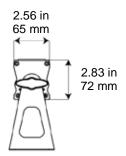



### 3. Setup

### **AC Power**

Each COLORdash Batten-Quad 12 has an auto-ranging power supply that works with an input voltage range of 100~240 VAC, 50/60 Hz. To determine the power requirements for each COLORdash Batten-Quad 12, refer to the label affixed to the product. You can also refer to the Technical Specifications chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, you may download Sizing Circuit Breakers from the Chauvet website: <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a>.



- Always connect this product to a protected circuit with an appropriate electrical ground to avoid the risk of electrocution or fire.
- To eliminate unnecessary wear and improve its lifespan, during periods of nonuse completely disconnect the product from power via breaker or by unplugging it.



Never connect this product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

#### **AC Plug**

The COLORdash Batten-Quad 12 comes with a power input cord terminated with a Neutrik® powerCON® connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with your product has no plug, or if you need to change the Edison plug, use the table below to wire the new plug.

Connection	Connection Wire (U.S.) Wire (I		Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green

### Fuse Replacement



Make sure to disconnect the product's power cord before replacing a blown fuse. Always replace the blown fuse with another of the same type and rating.

- 1. Disconnect this product from the power outlet.
- 2. Using a #2 flat-head screwdriver, unscrew the fuse holder cap from the housing.
- Remove the blown fuse and replace with another fuse of the same type and rating (2 A. 250 V).
- 4. Screw the fuse holder cap back in place and reconnect power.



### **Power Linking**

The COLORdash Batten-Quad 12 supports power linking. You can power link up to 9 products at 120 V, 16 at 208 V, or 17 at 230 V.

This product comes with a power input cord. This product does not come with a power linking cable; however, a power linking cable is available as an option.

### DMX Linking

You can link the COLORdash Batten-Quad 12 to a DMX controller using a standard DMX serial connection. If using other DMX compatible products with the COLORdash Batten-Quad 12, you can control each individually with a single DMX controller.

#### **DMX Modes**

The COLORdash Batten-Quad 12 uses the standard DMX data connection for the 4, 6, 10, 48, and 52 channel DMX modes.

- · Refer to the <u>Introduction</u> chapter for a brief description of these modes.
- Refer to the <u>Operation</u> chapter to learn how to configure the COLORdash Batten-Quad 12 to work in these modes.
- The <u>DMX Values</u> section provides you with detailed information regarding the DMX modes.

# Master/Slave Connectivity

The Master/Slave mode allows a COLORdash Batten-Quad 12 (the "master") to control one or more COLORdash Batten-Quad 12s (the "slaves") without a DMX controller. One COLORdash Batten-Quad 12 becomes the master when running an auto program or by being in Static mode.

You must configure each slave product's control panel to operate in Slave mode. During Master/Slave operation, the slave products will operate in unison with the master product.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master.



The **Operation** section of this manual provides detailed instructions on how to configure the Master and Slaves.



If you are not familiar with or need more information about DMX standards, Master/Slave connectivity, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.



Mounting

Before mounting this product, read and follow the <u>Safety Notes</u>. For our CHAUVET® Professional line of mounting clamps, go to <a href="http://trusst.com/products/">http://trusst.com/products/</a>.

Orientation

Always mount this product in a safe position and make sure there is adequate room for ventilation, configuration, and maintenance.


Rigging

Chauvet recommends using the following general guidelines when mounting this product.


- When selecting an installation location, consider easy access to this product for operation, programming adjustments, and routine maintenance.
- Make sure to mount this product away from any flammable material as indicated in the Safety Notes.
- Never mount in places where rain, high humidity, extreme temperature changes, or restricted ventilation may affect the product.
- If hanging this product, make sure that the mounting location can support the product's weight. See the <u>Technical Specifications</u> for the weight-bearing requirements of this product.
- When hanging this product, always secure to a fastening device using a safety cable.

**Procedure** 

The COLORdash Batten-Quad 12 comes with a hanging bracket and trunnions. The trunnions also serve as floor supports. You must supply your own mounting clamps. Make sure the clamps are capable of supporting the weight of this product. Use at least one mounting point per product.

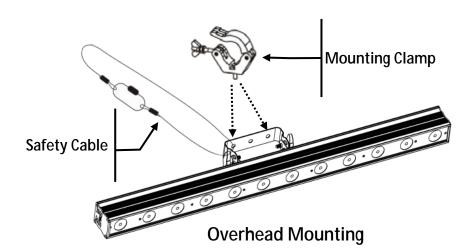

**Mounting Diagram** 

 

Floor Mounting



## 4. Operation

# Control Panel Description

Button	Function
<menu></menu>	Exits from the current menu or function
<enter></enter>	Enables the currently displayed menu or sets the currently selected value in to the current function
<up></up>	Navigates upward through the menu list and increases the numeric value when in a function
<down></down>	Navigates downward through the menu list and decreases the numeric value when in a function

### **Control Options**

You can set the COLORdash Batten-Quad 12 starting address in the 001–512 DMX range. This enables control of up to 9 products in the 52-channel **52 Ch** personality.

### **Programming**

Refer to the Menu Map to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press <MENU> repeatedly until the option shows on the display. Press <ENTER> to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until the option shows on the display. Press <ENTER> to select. In this case, if there is another programming level, you will see that first option, or you will see the selected value.
- · Press <MENU> repeatedly to exit to the previous main level.



### **DMX Personality**

This setting allows you to choose a particular DMX personality.

- 1. Go to the Channel main level.
- 2. Select the desired personality (4 Ch, 6 Ch, 10Ch, 48Ch, or 52Ch).



See the DMX Values section for the highest starting address you can select for

each personality. Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

#### **DMX Control**

In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.

- 1. Select a DMX personality as shown in DMX Personality.
- 2. Set the running mode:
  - a. Go to the M&S Mode main level.
  - b. Select Slave.
- 3. Set the starting address:
  - a. Go to the Address main level.
  - b. Select the starting address (001-509).

The highest recommended starting address for each DMX mode are as follows:



DMX Mode	DMX Address
4 Ch	509
6 Ch	507
10Ch	503
48Ch	465
52Ch	461

Static Color The Static Color mode allows for permanent RGBA color mixing without a DMX controller.

- 1. Go to the **Static** main level.
- Select the Fix C.
  - a. Choose desired color combination.
- 3. Select the Manu C
  - a. Select a color: R (red), G (green), B (blue), or A (amber).
  - b. Select the desired color value (000-255).
  - c. Repeat for each color.



**Auto Programs** Auto programs allow for dynamic RGBA color mixing without a DMX controller.

- 1. Go to Auto main level.
- 2. Select the desired auto (Auto 0-12).
- 3. Select Speed.
- 4. Choose the desired speed value (000–100).



You cannot edit any of the auto programs (Auto 0-12).

Auto Test This option allows you to test all the LEDs on the COLORdash Batten-Quad 12.

- 1. Go to Info main level.
- Select Auto > Test.

#### Master/Slave

The Master/Slave mode allows a group of COLORdash Batten-Quad 12s (the slaves) to simultaneously duplicate the output of another COLORdash Batten-Quad 12 (the master) without a DMX controller.

- 1. Set each of the slaves:
  - a. Go to M&S Mode.
  - b. Select Slave.
- 2. Set the master:
  - a. Go to M&S Mode.
  - b. Select Master.
  - c. Select an Auto or Static program as explained in Auto Programs.
- The master is the one that runs a program whether in Auto or Static Color mode.



- Do not connect a DMX controller to the products configured for Master/Slave operation. The DMX controller may interfere with signals from the master product.
- The master should be the first product in the daisy chain.



#### **Dimmer Curves**

This setting determines how fast the output of the COLORdash Batten-Quad 12 changes when you modify the values of the red, green, blue, amber, and dimmer faders. This setting provides four different options to simulate the dimming curve of an incandescent lighting product.

- 1. Go to the **Dim Mode** main level.
- 2. Select a dimmer curve (OFF, DIM 1, DIM 2, or DIM 3).

OFF: The output is proportional (linear) to the dimmer and RGBA channel



DIM1-DIM3: The output follows the dimmer and RGBA channel values based on the corresponding dimmer curve, DIM 1 being the fastest and DIM 3 the

**Software Information** This option shows what version of software the COLORdash Batten-Quad 12 is running.

- 1. Go to the **Info** main level.
- 2. Select **Version**. (the version number will show on the screen)

### **Fixture Hours**

This option shows the total amount of hours the COLORdash Batten-Quad 12 has been turned on.

- 1. Go to the **Info** main level.
- 2. Select **FixHours** (the hours will show on the screen).

#### **Backlight**

This setting allows you to set the amount of time the backlight on the COLORdash Batten-Quad 12 stays on after the last button is pressed on the control panel.

- 1. Go to the BackLite main level.
- 2. Select On, 10S, 20S, or 30S.
- 3. Press <ENTER>.

#### White Balance

This setting allows you to select the white color shown by the COLORdash Batten-Quad 12 when the DMX controller's red, green, and blue faders are set to 255.

- Go to the White Balance main level.
- 2. Select a color: **R** (red), **G** (green), or **B** (blue).
- Select a color value (125–255).
- 4. Repeat for each color.



When selecting White Balance, you will only be able to define the values of red, green, and blue.



The values of red, green, and blue configured from White Balance will define the color temperature shown when the RGB faders are set to 255.



### Menu Map

Main Level	Programming Levels				Description
Auto	Auto 0–12	0–12	Speed	0–100	Auto programs
Auto	Fa	de		0-100	Fade effect in which each color merges to the next
	Fix C				Red
					Green
			В		Blue
			Α		Amber
			GB		Green/Blue
			R B		Red/Blue
			RG		Red/Green
			RGB		Red/Green/Blue
			R A		Red/Amber
Static					Green/Amber
					Blue/Amber
					Red/Green/Amber
			R BA		Red/Blue/Amber
			GBA		Green/Blue/Amber
			RGBA		Red/Green/Blue/Amber
		R			
	Manu C	G	Value	0–255	Combines red, green, blue, and amber to make a
	Wallu C	В	Value	0 200	custom color
	A				
Dim Mode	Off				No dimmer
Dilli MOGG	DIM 1–DIM 3				Dimmer curves



## Menu Map (cont.)

Main Level	Programming Levels			Description
	10S			Turns off display backlight after 10 sec of inactivity
BackLite		20\$		Turns off display backlight after 20 sec of inactivity
DackLile		30S		Turns off display backlight after 30 sec of inactivity
		On		Display backlight always on
	Auto		Test	Turns on all LEDs in sequence for testing
Info		FixHours		Shows total operating hours
		Version		Shows installed software version
Address		001–509		Selects DMX address
	4 Ch			4-channel: RGBA control
	6 Ch			6-channel: RGBA, dimmer, strobe
Channel	10Ch			10-channel: RGBA, dimmer, strobe, color macro, white balance, auto programs, dimmer speed, auto speed
	48Ch			48-channel: RGBA pixel control
	52Ch			52-channel: RGBA pixel control, dimmer, strobe, auto programs, auto speed
MOCModo	Master			DMX mode
M&S Mode	Slave			Slave mode
	R			Sets red LED maximum value
White Balance	G	Value	125–255	Sets green LED maximum value
	В			Sets blue LED maximum value




### **DMX Values**

52Ch

Channel	Function	Value	Percent/Setting
1	Red 1	000 Ó 255	0–100%
2	Green 1	000 Ó 255	0–100%
3	Blue 1	000 Ó 255	0–100%
4	Amber 1	000 Ó 255	0–100%
5	Red 2	000 Ó 255	0–100%
6	Green 2	000 Ó 255	0–100%
7	Blue 2	000 Ó 255	0–100%
8	Amber 2	000 Ó 255	0–100%
9	Red 3	000 Ó 255	0–100%
10	Green 3	000 Ó 255	0–100%
11	Blue 3	000 Ó 255	0–100%
12	Amber 3	000 Ó 255	0–100%
13	Red 4	000 Ó 255	0–100%
14	Green 4	000 Ó 255	0–100%
15	Blue 4	000 Ó 255	0–100%
16	Amber 4	000 Ó 255	0–100%
17	Red 5	000 Ó 255	0–100%
18	Green 5	000 Ó 255	0–100%
19	Blue 5	000 Ó 255	0–100%
20	Amber 5	000 Ó 255	0–100%
21	Red 6	000 Ó 255	0–100%
22	Green 6	000 Ó 255	0–100%
23	Blue 6	000 Ó 255	0–100%
24	Amber 6	000 Ó 255	0–100%
25	Red 7	000 Ó 255	0–100%
26	Green 7	000 Ó 255	0–100%
27	Blue 7	000 Ó 255	0–100%
28	Amber 7	000 Ó 255	0–100%
29	Red 8	000 Ó 255	0–100%
30	Green 8	000 Ó 255	0–100%
31	Blue 8	000 Ó 255	0–100%
32	Amber 8	000 Ó 255	0–100%
33	Red 9	000 Ó 255	0–100%
34	Green 9	000 Ó 255	0–100%
35	Blue 9	000 Ó 255	0–100%
36	Amber 9	000 Ó 255	0–100%

### **COLORdash Batten-Quad 12 Sections for DMX Control**

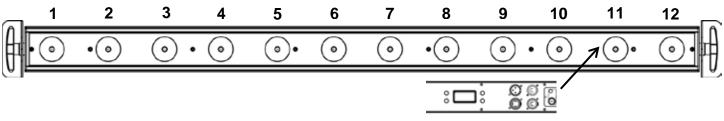

**Display Position** 



52Ch (cont.)

Channel	Function	Value	Percent/Setting
37	Red 10	000 Ó 255	0–100%
38	Green 10	000 Ó 255	0–100%
39	Blue 10	000 Ó 255	0–100%
40	Amber 10	000 Ó 255	0–100%
41	Red 11	000 Ó 255	0–100%
42	Green 11	000 Ó 255	0–100%
43	Blue 11	000 Ó 255	0–100%
44	Amber 11	000 Ó 255	0–100%
45	Red 12	000 Ó 255	0–100%
46	Green 12	000 Ó 255	0–100%
47	Blue 12	000 Ó 255	0–100%
48	Amber 12	000 Ó 255	0–100%
49	Auto Programs	000 ó 010 011 ó 030 031 ó 050 051 ó 070 071 ó 090 091 ó 110 111 ó 130 131 ó 150 151 ó 170 171 ó 190 191 ó 210 211 ó 230 231 ó 250 251 ó 255	No function Auto 1 Auto 2 Auto 3 Auto 4 Auto 5 Auto 6 Auto 7 Auto 8 Auto 9 Auto 10 Auto 11 Auto 12 Auto 1–12
50	Auto Speed	000 Ó 255	Slow to fast
51	Dimmer	000 Ó 255	0–100%
52	Strobe	000 Ó 010 011 Ó 255	No function Slow to fast

48Ch

		•	
Channel	Function	Value	Percent/Setting
1	Red 1	000 Ó 255	0–100%
2	Green 1	000 Ó 255	0–100%
3	Blue 1	000 Ó 255	0–100%
4	Amber 1	000 Ó 255	0–100%
5	Red 2	000 Ó 255	0–100%
6	Green 2	000 Ó 255	0–100%
7	Blue 2	000 Ó 255	0–100%
8	Amber 2	000 Ó 255	0–100%
9	Red 3	000 Ó 255	0–100%
10	Green 3	000 Ó 255	0–100%
11	Blue 3	000 Ó 255	0–100%
12	Amber 3	000 ó 255	0–100%



48Ch (cont.)

Channel	Function	Value	Percent/Setting
13	Red 4	000 Ó 255	0–100%
14	Green 4	000 Ó 255	0–100%
15	Blue 4	000 Ó 255	0–100%
16	Amber 4	000 Ó 255	0–100%
17	Red 5	000 Ó 255	0–100%
18	Green 5	000 Ó 255	0–100%
19	Blue 5	000 Ó 255	0–100%
20	Amber 5	000 Ó 255	0–100%
21	Red 6	000 Ó 255	0–100%
22	Green 6	000 Ó 255	0–100%
23	Blue 6	000 Ó 255	0–100%
24	Amber 6	000 Ó 255	0–100%
25	Red 7	000 Ó 255	0–100%
26	Green 7	000 Ó 255	0–100%
27	Blue 7	000 Ó 255	0–100%
28	Amber 7	000 Ó 255	0–100%
29	Red 8	000 Ó 255	0–100%
30	Green 8	000 Ó 255	0–100%
31	Blue 8	000 Ó 255	0–100%
32	Amber 8	000 Ó 255	0–100%
33	Red 9	000 Ó 255	0–100%
34	Green 9	000 Ó 255	0–100%
35	Blue 9	000 Ó 255	0–100%
36	Amber 9	000 Ó 255	0–100%
37	Red 10	000 Ó 255	0–100%
38	Green 10	000 Ó 255	0–100%
39	Blue 10	000 Ó 255	0–100%
40	Amber 10	000 Ó 255	0–100%
41	Red 11	000 Ó 255	0–100%
42	Green 11	000 Ó 255	0–100%
43	Blue 11	000 Ó 255	0–100%
44	Amber 11	000 Ó 255	0–100%
45	Red 12	000 Ó 255	0–100%
46	Green 12	000 Ó 255	0–100%
47	Blue 12	000 Ó 255	0–100%
48	Amber 12	000 Ó 255	0–100%



10Ch

Channel	Function	Value	Percent/Setting	
1	Dimmer	000 Ó 255	0–100%	
2	Red	000 Ó 255	0–100%	
3	Green	000 Ó 255	0–100%	
4	Blue	000 Ó 255	0–100%	
5	Amber	000 Ó 255	0–100%	
	0	000 Ó 010	No function	
6	Strobe	011 Ó 255	Slow to fast	
7	Color Macro + White Balance	000 6 010 011 6 030 031 6 050 051 6 070 071 6 090 091 6 110 111 6 130 131 6 150 151 6 170 171 6 200 201 6 205 206 6 210 211 6 220 221 6 225 226 6 230 231 6 235 236 6 240 241 6 250 241 6 250 251 6 255	No function R: 100% G: 0–100% B: 0 R: 100%–0 G: 100% B: 0 R: 0 G: 100% B: 0–100% R: 0 G: 100%–0 B: 100% R: 0 B: 100% R: 0 B: 100% R: 0 B: 100% R: 100% G: 0 B: 100%–0 R: 100% G: 0 B: 100%–0 R: 100%–0 G: 100%–0 B: 100% R: 100%–0 G: 100%–0 B: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 10	
8	Auto Programs	000 6 010 011 6 030 031 6 050 051 6 070 071 6 090 091 6 110 111 6 130 131 6 150 151 6 170 171 6 190 191 6 210 211 6 230 231 6 250 251 6 255	No function Auto 1 Auto 2 Auto 3 Auto 4 Auto 5 Auto 6 Auto 7 Auto 8 Auto 9 Auto 10 Auto 11 Auto 12 Auto 1–12	
9	Auto Speed	000 Ó 255	Slow to fast	
10	Dimmer Speed	000 \( \phi \) 051 052 \( \phi \) 101 102 \( \phi \) 152 153 \( \phi \) 203 204 \( \phi \) 255	Preset dimmer speed from display menu Linear dimmer Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 (slowest)	



6 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 Ó 255	0–100%
2	Red	000 Ó 255	0–100%
3	Green	000 Ó 255	0–100%
4	Blue	000 Ó 255	0–100%
5	Amber	000 Ó 255	0–100%
6	Strobe	000 Ó 010 011 Ó 255	

4 Ch

Channel	Function	Value	Percent/Setting
1	Red	000 Ó 255	0–100%
2	Green	000 Ó 255	0–100%
3	Blue	000 Ó 255	0–100%
4	Amber	000 Ó 255	0–100%



### 5. Technical Information

# Maintenance

Product To maintain optimum performance and minimize wear, you should clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

> As a rule, clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean your product:

- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- 3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
- 4. Clean all external surfaces with a mild solution of non-ammonia glass cleaner or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint-free cotton cloth or a lens cleaning tissue.
- 6. Wipe any dirt or grime to the outside edges of the lens surface.
- 7. Gently polish the lens surfaces until they are free of haze and lint.



Always dry the external surfaces thoroughly and carefully after cleaning them.

### Returns

You must send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



DO NOT write the RMA number directly on the box. Instead, write it on a properly affixed label.

Once you have received the RMA number, include the following information on a piece of paper inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem(s)

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be the customer's responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).



**Technical Specifications** 

<b>Dimensions and</b>
Weight

Length	Width	Height	Weight
41 in (1041 mm)	3.2 in (82 mm)	6.5 in (164 mm)	10.6 lb (4.8 kg)

Note: Dimensions in inches rounded to the nearest decimal digit.

### Pow

		`	
Power	Power Supply Type	Range	Voltage Selection
	Switching (internal)	100 to 240 V, 50/60 Hz	Auto-ranging
	Parameter	120 V, 60 Hz	230 V, 50 Hz
	Consumption	175 W	175 W
	Operating	1.45 A	0.76 A
	Power linking current	13.6 A (9 products)	13.6 A (17 products)
	Fuse	2 A, 250 V	2 A, 250 V
	Power I/O	U.S./Worldwide	Europe
	Power input connector	Neutrik® powerCON® A	Neutrik® powerCON® A
	Power output connector	Neutrik® powerCON® B	Neutrik® powerCON® B
	Power cord plug	Edison (U.S.)	Local plug
Light Source	Туре	Power	Lifespan
	LED	7 W	50,000 hours
	Color	Quantity	Current
	Quad-color (RGBA)	12	500 mA
Photometrics	Parameter	Standard 20º Optics	
	Illuminance @ 5 m	539 lx	
	Beam angle	22°	
	Field angle	31°	
Thermal	Max. External Temperature	Cooling System	
	113 °F (45 °C)	Convection	
DMX	I/O Connectors	Connector Type	Channel Range
	3- and 5-pin XLR	Sockets	4, 6, 10, 48 or 52
Ordering	Product Name	Item Code	UPC Number
	COLORdash Batten-Quad 12	03030714	781462210625







UL 1573



### **Contact Us**

**WORLD HEADQUARTERS - Chauvet** 

General Information Technical Support

Address: 5200 NW 108th Avenue Voice: (954) 577-4455 (Press 4)

Sunrise, FL 33351 Fax: (954) 756-8015

Voice: (954) 577-4455 Email: tech@chauvetlighting.com

Fax: (954) 929-5560

Toll free: (800) 762-1084 World Wide Web www.chauvetlighting.com

UNITED KINGDOM AND IRELAND - Chauvet Europe Ltd.

General Information Technical Support

Address: Unit 1C Email: <u>uktech@chauvetlighting.com</u>

Brookhill Road Industrial Estate

Pinxton, Nottingham, UK World Wide Web www.chauvetlighting.co.uk

**NG16 6NT** 

Voice: +44 (0)1773 511115 Fax: +44 (0)1773 511110 **MEXICO** - Chauvet Mexico

General Information Technical Support

Address: Av. Santa Ana 30 Email: servicio@chauvet.com.mx

Parque Industrial Lerma
Lerma, Mexico C.P. 52000

World Wide Web www.chauvet.com.mx

Voice: +52 (728) 285-5000

CHAUVET EUROPE - Chauvet Europe BVBA

General Information Technical Support

Address: Stokstraat 18 Email: <u>Eutech@chauvetlighting.eu</u>

9770 Kruishoutem

Belgium World Wide Web www.chauvetlighting.eu

Voice: +32 9 388 93 97

Outside the U.S., United Kingdom, Ireland, Mexico, or Benelux contact the dealer of record. Follow their instructions to request support or to return a product. Visit our website for contact details.