



Keyboard Cross Reference: GKC-1540

January 3rd, 2013

* Note This Page Not Formatted For Printing

Use Ctrl-F to search by Manufacturer, Model Number, or UPC

Manufacturer	Model	UPC	Type	Fits (1)
Access	VIRUS TI 61	889406177802	Keyboard	GKC-1540
Akai	MAX49	0825213002692	Keyboard	GKC-1540
Akai	MPK49	825213002319	Keyboard	GKC-1540
Alesis	A6		Keyboard	GKC-1540
Alesis	ANDROMEDA		Keyboard	GKC-1540
Alesis	FUSION 6HD		Keyboard	GKC-1540
Alesis	ION		Keyboard	GKC-1540
Arturia	Origin		Keyboard	GKC-1540
Benjamin Adams	CK62		Keyboard	GKC-1540
Casio	AT3	079767313838	Keyboard	GKC-1540
Casio	CTK-2000	079767313517	Keyboard	GKC-1540
Casio	CTK-2100	079767313654	Keyboard	GKC-1540
Casio	CTK-2100		Keyboard	GKC-1540
Casio	CTK-230		Keyboard	GKC-1540
Casio	CTK-3000	079767313531	Keyboard	GKC-1540
Casio	CTK-3200	079767314071	Keyboard	GKC-1540
Casio	CTK4000	079767313548	Keyboard	GKC-1540
Casio	CTK-4200	079767314002	Keyboard	GKC-1540
Casio	CTK-496		Keyboard	GKC-1540
Casio	CTK5000		Keyboard	GKC-1540
Casio	CTK6000	079767313814	Keyboard	GKC-1540
Casio	CTK-691		Keyboard	GKC-1540
Casio	CTK7000	079767313821	Keyboard	GKC-1540
Casio	CTK710		Keyboard	GKC-1540
Casio	CTK800		Keyboard	GKC-1540
Casio	CTK810		Keyboard	GKC-1540
Casio	CTK900		Keyboard	GKC-1540
Casio	LK100		Keyboard	GKC-1540
Casio	LK-165	874171004248	Keyboard	GKC-1540
Casio	LK-2005		Keyboard	GKC-1540
Casio	LK-220		Keyboard	GKC-1540
Casio	LK-230	079767313661	Keyboard	GKC-1540
Casio	LK-270		Keyboard	GKC-1540
Casio	LK-280	079767314026	Keyboard	GKC-1540
Casio	LK-300TV		Keyboard	GKC-1540
Casio	LK94		Keyboard	GKC-1540
Casio	XW-G1	079767314163	Keyboard	GKC-1540
Casio	XW-P1	079767314156	Keyboard	GKC-1540
Clavia	G2X		Keyboard	GKC-1540
Clavia	NORD ELECTRO 2 61		Keyboard	GKC-1540
Clavia	NORD ELECTRO 61		Keyboard	GKC-1540
Clavia	NORD MODULAR G2X		Keyboard	GKC-1540
CME	UF5		Keyboard	GKC-1540
CME	UF50	877295000578	Keyboard	GKC-1540
CME	UF6		Keyboard	GKC-1540
CME	UF60	877295000585	Keyboard	GKC-1540
CME	VX 5		Keyboard	GKC-1540
CME	VX 6		Keyboard	GKC-1540
Dave Smith	POLY EVOLVER KEYBOARD	855346000869	Keyboard	GKC-1540
Dave Smith	PROPHET 08	855346000906	Keyboard	GKC-1540
E-MU	LONGboard 61		Keyboard	GKC-1540
E-MU	SHORTboard 49		Keyboard	GKC-1540
Hammond	SK1	4939334669323	Keyboard	GKC-1540
Ketron	Audya 5		Keyboard	GKC-1540
Korg	CX3		Keyboard	GKC-1540
Korg	i30		Keyboard	GKC-1540
Korg	KONTROL49		Keyboard	GKC-1540
Korg	KORG M1		Keyboard	GKC-1540
Korg	Kronos 61	4959112081000	Keyboard	GKC-1540
Korg	M3-61	4959112053922	Keyboard	GKC-1540
Korg	M50-61	4959112066755	Keyboard	GKC-1540
Korg	microPIANO	4959112079946	Keyboard	GKC-1540
Korg	MS2000		Keyboard	GKC-1540
Korg	MSR2000B		Keyboard	GKC-1540
Korg	O1WFD 61		Keyboard	GKC-1540
Korg	Pa3X 61	4959112081826	Keyboard	GKC-1540
Korg	PA50SD	4959112071803	Keyboard	GKC-1540
Korg	PS60	4959112077966	Keyboard	GKC-1540
Korg	RADIAS 49-KEY		Keyboard	GKC-1540
Korg	RADIAS SYNTHESIZER		Keyboard	GKC-1540
Korg	TR61		Keyboard	GKC-1540
Korg	TRITON LE 61		Keyboard	GKC-1540

Korg	X3		Keyboard	GKC-1540
Kurzweil	K2661		Keyboard	GKC-1540
Kurzweil	PC161		Keyboard	GKC-1540
Kurzweil	PC361		Keyboard	GKC-1540
Kurzweil	PC3K6	883793202918	Keyboard	GKC-1540
Kurzweil	PC3LE6	883793202420	Keyboard	GKC-1540
M-Audio	KEYSTATION 61ES		Keyboard	GKC-1540
M-Audio	Venom	612391710286	Keyboard	GKC-1540
nektar	Panorama P4	859383002152	Keyboard	GKC-1540
Nord	C2	834035000861	Keyboard	GKC-1540
Nord	C2 Combo Organ	834035000861	Keyboard	GKC-1540
Nord	C2D Combo Organ	834035000861	Keyboard	GKC-1540
Nord	ELECTRO 2 61		Keyboard	GKC-1540
Nord	ELECTRO 3 61	834035000793	Keyboard	GKC-1540
Nord	NC1		Keyboard	GKC-1540
Novation	49 SL Mk II	815301001010	Keyboard	GKC-1540
Novation	61 SL Mk II	815301001027	Keyboard	GKC-1540
Novation	Impulse49	815301000419	Keyboard	GKC-1540
Novation	Impulse61	815301000426	Keyboard	GKC-1540
Novation	UltraNova	815301000112	Keyboard	GKC-1540
Roland	BK5	761294502037	Keyboard	GKC-1540
Roland	E09	761294400340	Keyboard	GKC-1540
Roland	EXR-3		Keyboard	GKC-1540
Roland	EXR46-OR		Keyboard	GKC-1540
Roland	EXR-5		Keyboard	GKC-1540
Roland	FANTOM G6	761294089682	Keyboard	GKC-1540
Roland	FANTOM X6		Keyboard	GKC-1540
Roland	FANTOM XA 61		Keyboard	GKC-1540
Roland	GW-7		Keyboard	GKC-1540
Roland	GW-8	761294408179	Keyboard	GKC-1540
Roland	JP-8000		Keyboard	GKC-1540
Roland	JUNO D 61		Keyboard	GKC-1540
Roland	Juno Di	761294403099	Keyboard	GKC-1540
Roland	Juno Gi	761294412718	Keyboard	GKC-1540
Roland	JUNO-D		Keyboard	GKC-1540
Roland	JUNO-G		Keyboard	GKC-1540
Roland	JV30		Keyboard	GKC-1540
Roland	Prelude	761294409473	Keyboard	GKC-1540
Roland	RS-50		Keyboard	GKC-1540
Roland	RS-70		Keyboard	GKC-1540
Roland	SH-201		Keyboard	GKC-1540
Roland	V SYNTH		Keyboard	GKC-1540
Roland	V SYNTH GT	761294403051	Keyboard	GKC-1540
Roland	VP-550		Keyboard	GKC-1540
Roland	VP-770	761294406090	Keyboard	GKC-1540
Roland	XP30		Keyboard	GKC-1540
Roland	XP-50		Keyboard	GKC-1540
StudioLogic	Sledge		Keyboard	GKC-1540
StudioLogic	VMK149		Keyboard	GKC-1540
StudioLogic	VMK-161+	093018822009	Keyboard	GKC-1540
StudioLogic	VMK-161+ORGAN		Keyboard	GKC-1540
Suzuki	SP-37		Keyboard	GKC-1540
Suzuki	SP-67		Keyboard	GKC-1540
Yamaha	DXJ 203		Keyboard	GKC-1540
Yamaha	EZ150		Keyboard	GKC-1540
Yamaha	EZ200	086792304458	Keyboard	GKC-1540
Yamaha	EZ220	086792963136	Keyboard	GKC-1540
Yamaha	EZ250I		Keyboard	GKC-1540
Yamaha	KX61		Keyboard	GKC-1540
Yamaha	MM6	086792858098	Keyboard	GKC-1540
Yamaha	MO6		Keyboard	GKC-1540
Yamaha	MOTIF ES6		Keyboard	GKC-1540
Yamaha	MOTIF XF6	086792941806	Keyboard	GKC-1540
Yamaha	MOTIF XS6		Keyboard	GKC-1540
Yamaha	MOTIF6		Keyboard	GKC-1540
Yamaha	MOX6	086792950884	Keyboard	GKC-1540
Yamaha	PSR 175		Keyboard	GKC-1540
Yamaha	PSR E423	086792939506	Keyboard	GKC-1540
Yamaha	PSR-172		Keyboard	GKC-1540
Yamaha	PSR-273		Keyboard	GKC-1540
Yamaha	PSR-293		Keyboard	GKC-1540
Yamaha	PSR-3000		Keyboard	GKC-1540
Yamaha	PSR-A2000	086792958019	Keyboard	GKC-1540
Yamaha	PSR-E203		Keyboard	GKC-1540
Yamaha	PSR-E213		Keyboard	GKC-1540
Yamaha	PSR-E223		Keyboard	GKC-1540
Yamaha	PSR-E233	086792944654	Keyboard	GKC-1540
Yamaha	PSR-E233	086792944654	Keyboard	GKC-1540
Yamaha	PSR-E303		Keyboard	GKC-1540

Yamaha	PSR-E313	086792859385	Keyboard	GKC-1540
Yamaha	PSR-E323		Keyboard	GKC-1540
Yamaha	PSR-E333	086792944777	Keyboard	GKC-1540
Yamaha	PSR-E333	086792944777	Keyboard	GKC-1540
Yamaha	PSR-E403		Keyboard	GKC-1540
Yamaha	PSR-E413		Keyboard	GKC-1540
Yamaha	PSR-E423	086792939506	Keyboard	GKC-1540
Yamaha	PSR-E433	086792964706	Keyboard	GKC-1540
Yamaha	PSR-OR700		Keyboard	GKC-1540
Yamaha	PSR-S500		Keyboard	GKC-1540
Yamaha	PSR-S550BK		Keyboard	GKC-1540
Yamaha	PSR-S650	086792944586	Keyboard	GKC-1540
Yamaha	PSR-S700		Keyboard	GKC-1540
Yamaha	PSR-S710	086792931784	Keyboard	GKC-1540
Yamaha	PSR-S900		Keyboard	GKC-1540
Yamaha	PSR-S910	086792931753	Keyboard	GKC-1540
Yamaha	S03		Keyboard	GKC-1540
Yamaha	SY77		Keyboard	GKC-1540
Yamaha	YPT-200		Keyboard	GKC-1540
Yamaha	YPT-220	086792899558	Keyboard	GKC-1540
Yamaha	YPT-310		Keyboard	GKC-1540
Yamaha	YPT-400		Keyboard	GKC-1540

This list is intended as a guide; not a substitute for testing the actual fit. All product information referenced above is based on the manufacturer's published specifications. These specifications may change over time and without notice. If you have questions on a specific case or product, or see that a correction is needed, please contact Gator Customer Service at info@gatorcases.com