

# ROTOSPHERE HP

User Manual



## TABLE OF CONTENTS

<b>1. Before You Begin .....</b>	<b>1</b>
What Is Included .....	1
Unpacking Instructions.....	1
Claims .....	1
Text Conventions .....	1
Symbols .....	1
Disclaimer .....	1
Intellectual Property .....	1
Safety Notes.....	2
<b>2. Introduction.....</b>	<b>3</b>
Product Overview.....	3
Product Dimensions .....	3
<b>3. Setup.....</b>	<b>4</b>
AC Power .....	4
Fuse Replacement .....	4
Power Linking.....	4
Mounting .....	5
Orientation.....	5
Rigging .....	5
<b>4. Operation.....</b>	<b>6</b>
Control Panel Operation.....	6
Menu Map .....	6
Configuration (DMX) .....	7
Personality and Starting Address.....	7
DMX Channel Assignments and Values .....	7
Configuration (Standalone) .....	8
Automatic Programs.....	8
Automatic Program Speed .....	8
Motor Rotation Speed .....	8
Preset Static Colors .....	8
Sound-Active Mode .....	8
Sound Sensitivity .....	9
Custom Color Mixing.....	9
IRC-6 Infrared Remote Control .....	9
Master/Slave Mode .....	10
<b>5. Maintenance.....</b>	<b>11</b>
Product Maintenance .....	11
<b>6. Technical Specifications.....</b>	<b>12</b>
<b>Contact Us.....</b>	<b>13</b>
Warranty & Returns.....	13

# 1. Before You Begin

## What Is Included

- Rotosphere HP
- Power cable
- Hanging bracket with mounting hardware
- Quick Reference Guide

## Unpacking Instructions

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

### Claims

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate a claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

## Text Conventions

Convention	Meaning
<b>1–512</b>	A range of values
<b>50/60</b>	A set of values of which only one can be chosen
<b>Settings</b>	A menu option not to be modified
<b>&lt;ENTER&gt;</b>	A key to be pressed on the product’s control panel
<b>ON</b>	A value to be entered or selected

## Symbols

Symbol	Meaning
	Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user.
	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.

## Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from [www.chauvetdj.com](http://www.chauvetdj.com).

## Intellectual Property

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

© Copyright 2023 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Chauvet, Chauvet DJ, the Chauvet logo, and Rotosphere HP are registered trademarks or trademarks of Chauvet & Sons LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

## Safety Notes




- **ALWAYS:**
  - ◆ Connect to a grounded circuit.
  - ◆ Connect to operating voltages as specified on the product's spec sticker.
  - ◆ Disconnect from power before replacing the fuse.
  - ◆ Disconnect from its power source during periods of inactivity.
  - ◆ Use a safety cable when suspending overhead.
  - ◆ Heed all restrictions and warnings on the spec sticker.
  - ◆ Mount in a location with at least 20 in (50 cm) of ventilation.
  - ◆ Replace the fuse with the same type and rating.
- In the event of a serious operating problem, stop using immediately.
- **DO NOT:**
  - ◆ Open this product or attempt any repairs. It contains no user-serviceable parts.
  - ◆ Look at the light source when the product is on.
  - ◆ Use if the power cord is crimped or damaged.
  - ◆ Disconnect by pulling on the power cord.
  - ◆ Allow flammable materials close to the product when it is operating.
  - ◆ Touch the housing when it is on.
  - ◆ Block any ventilation holes/slots in the housing.
  - ◆ Connect to a dimmer or rheostat.
  - ◆ Carry the product by its power cord.
  - ◆ Operate in temperatures higher than 104°F (40°C).
  - ◆ Expose to environments that exceed the Ingress Protection (IP) rating.
  - ◆ Expose to rain or moisture.
  - ◆ Use outdoors.
  - ◆ Expose to corrosive environmental conditions such as temperature, humidity, salinity, pressure, radiation, or shock.
  - ◆ Set this product on a flammable surface.




**Keep this User Manual for future use. If the product is sold to someone else, be sure that they also receive this document.**

## 2. Introduction

### Product Overview

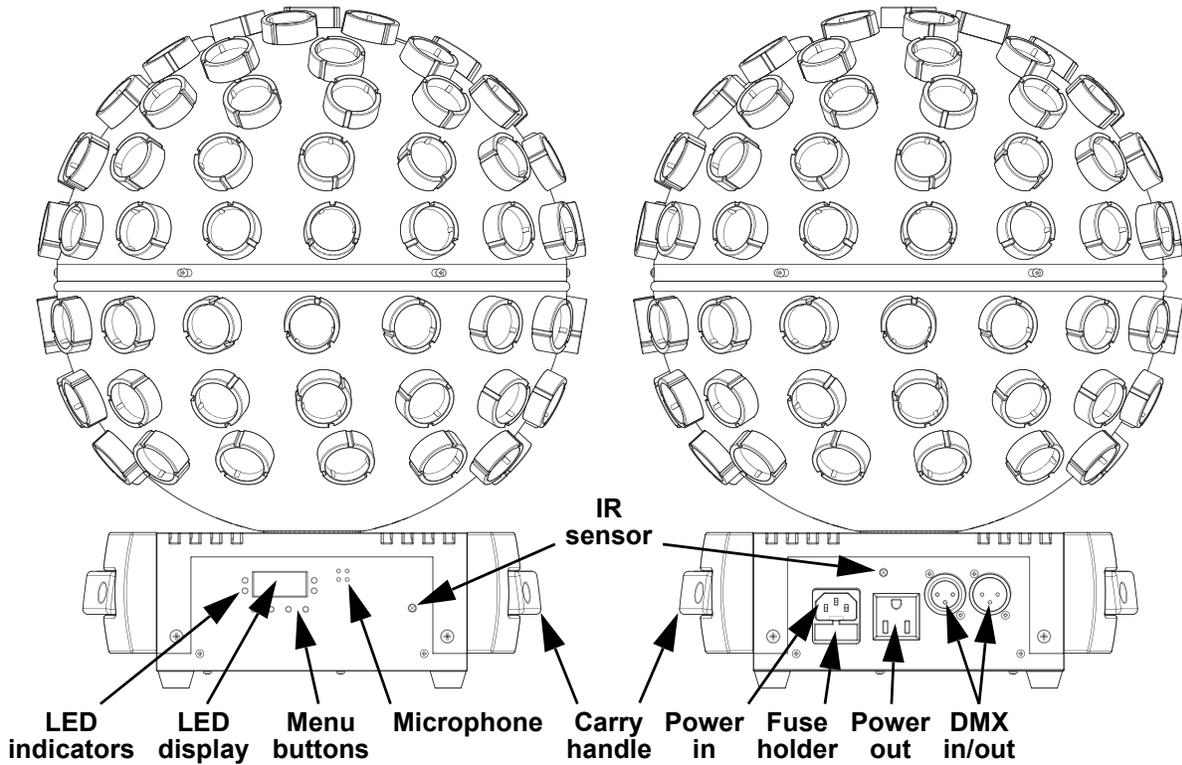

### Product Dimensions

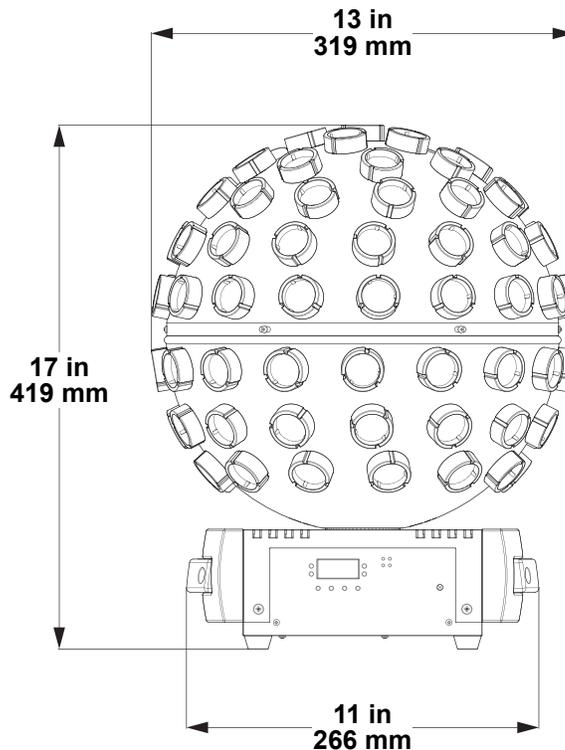

### 3. Setup

#### AC Power

The Rotosphere HP has an auto-ranging power supply and it can work with an input voltage range of 100 to 240 VAC, 50/60 Hz.

To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart. The listed current rating indicates the product's average current draw under normal conditions.




- **Always connect the product to a protected circuit (a circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.**
- **To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.**



**Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.**

#### Fuse Replacement

1. Disconnect the product from power.
2. Wedge the tip of a flat-head screwdriver into the slot of the fuse holder.
3. Pry the fuse holder out of the housing.
4. Remove the blown fuse from the holder and replace with a fuse of the exact same type and rating.
5. Insert the fuse holder back in place and reconnect power.

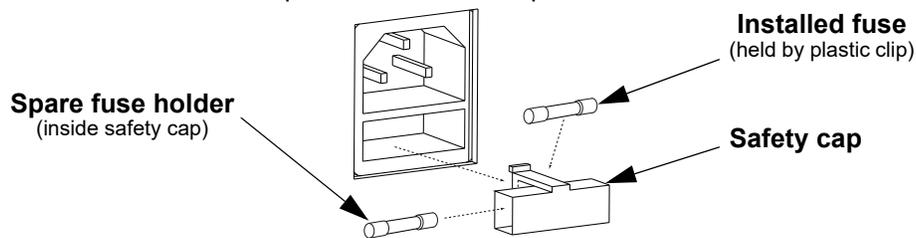

**Disconnect the product from the power outlet before replacing the fuse.**




**Always replace a blown fuse with one of the same type and rating.**

#### Power Linking

This product provides power linking via the outlet located in the back of the product. See the diagram below for further explanation.

#### Power Linking Diagram

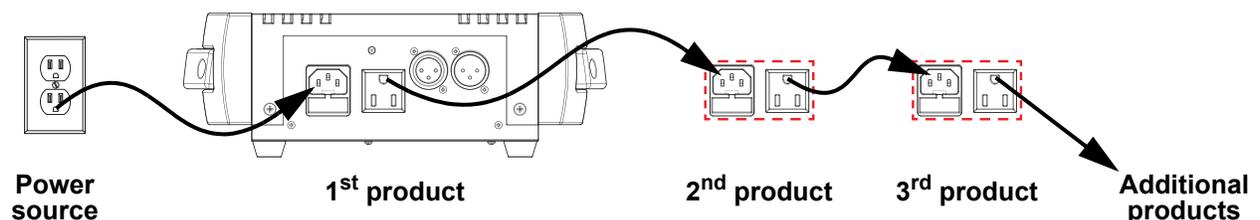

**It is possible to link up to 8 Rotosphere HP products on 120 VAC or up to 13 products on 230 VAC.**



**The power linking diagram shown above corresponds to the North American version of the product ONLY! If using the product in other markets, consult with the local Chauvet distributor as power linking connectors and requirements may differ by country or region.**

## Mounting

Before mounting the product, read and follow the safety recommendations indicated in the [Safety Notes](#).


### Orientation

The Rotosphere HP may be mounted in any position; however, make sure adequate ventilation is provided around the product.

### Rigging

- Before deciding on a location for the product, always make sure there is easy access to the product for maintenance and programming.
- Make sure that the structure and attachment points can support the weight before hanging the product (see the [Technical Specifications](#))
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, such as an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity. The bracket has a 13-mm hole, which is appropriate for this purpose.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the knobs.

### Mounting Diagram

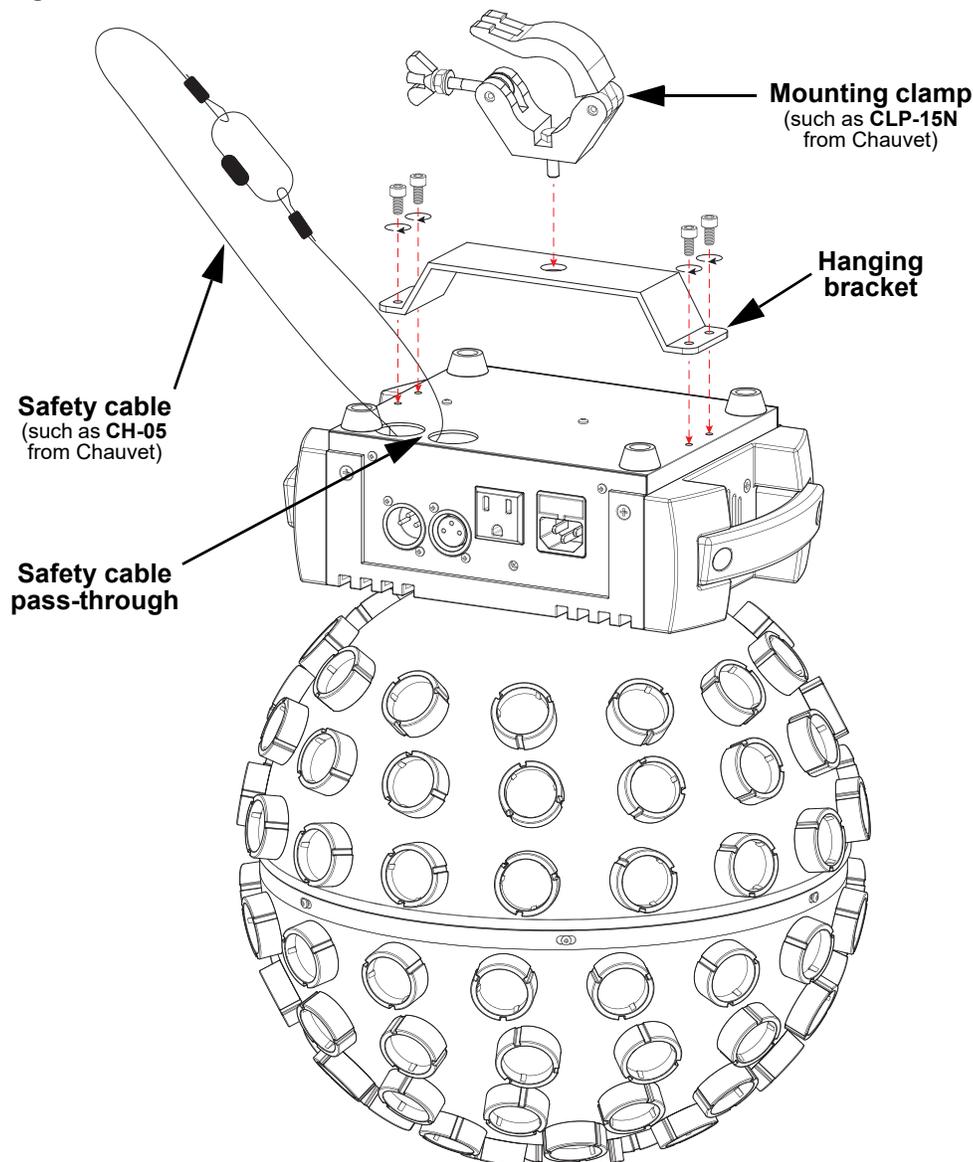

## 4. Operation

### Control Panel Operation

To access the control panel functions, use the four buttons located underneath the display. Please refer to the [Product Overview](#) to see the button locations on the control panel.

Button	Function
<MENU>	Press to find an operation mode or to back out of the current menu option
<UP>	Press to scroll up the list of options or to find a higher value
<DOWN>	Press to scroll down the list of options or to find a lower value
<ENTER>	Press to activate a menu option or a selected value

### Menu Map

Refer to the Rotosphere HP product page on [www.chauvetdj.com](http://www.chauvetdj.com) for the latest menu map.

Mode	Programming Levels		Description	
DMX Mode	3Ch	A001–512	3-channel DMX mode	
	12Ch		12-channel DMX mode	
	28Ch		28-channel DMX mode	
Programs	P--	P 1–5	Automatic programs	
Auto Speed	S--	S001–100	Program speed for P 1–5	
Motor	Mot	M000–100	Motor speed for programs and static colors	
Static Colors	C--	C001–015	Static colors	
Sound Mode	Snd	bo	Sound-active program, blackout without sound	
		SLoU	Sound-active program, slow down without sound	
Sensitivity	SEnS	u001–100	Sets sound sensitivity	
Custom Color Mixing	U--	r000–255	Custom static colors Combine red, green, blue, white, cyan, magenta, yellow, and orange	
		G000–255		
		b000–255		
		U000–255		
		C000–255		
		M000–255		
		y000–255		
		o000–255		
		S000–100		Strobe rate
		DI-		DI-L
DI-R	Rotate right			
Infrared Mode	SEt	M000–100	Motor speed	
		on	Turns infrared on or off	
		oFF		

## Configuration (DMX)

The Rotosphere HP works with a DMX controller. Information about DMX is in the CHAUVET DMX Primer, which is available from the Chauvet website [chauvetlighting.com/downloads/DMX\\_Primer\\_rev05\\_WO.pdf](http://chauvetlighting.com/downloads/DMX_Primer_rev05_WO.pdf).

### Personality and Starting Address

The Rotosphere HP uses up to 28 DMX channels in the **28Ch** DMX mode, which defines the highest recommended address to **485**.

When selecting a starting DMX address, always consider the number of DMX channels the DMX mode uses. If the starting address is set too high, access to some channels could be restricted.

For information about the DMX protocol, download the DMX Primer from [www.chauvetdj.com](http://www.chauvetdj.com).

To select the personality and starting address, do the following:

1. Press **<MENU>** repeatedly until **3Ch**, **12Ch**, or **28Ch** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to select the starting address, from **A001–512**.
4. Press **<ENTER>**.

### DMX Channel Assignments and Values

3Ch	12Ch	28Ch	Function	Value	Percent/Setting
1	1	–	Program	000	No function
				001 ⇔ 250	Automatic program
				251 ⇔ 255	Sound-active program
2	2	–	Program speed (when Ch. 1 is 001 ⇔ 250)	000 ⇔ 255	Automatic program speed, slow to fast
			Sound sensitivity (when Ch. 1 is 251 ⇔ 255)	000 ⇔ 255	Sound sensitivity, low to high
–	3	1	Red 1	000 ⇔ 255	0–100%
–	4	2	Green 1	000 ⇔ 255	0–100%
–	5	3	Blue 1	000 ⇔ 255	0–100%
–	6	4	White 1	000 ⇔ 255	0–100%
–	7	5	Cyan 1	000 ⇔ 255	0–100%
–	8	6	Magenta 1	000 ⇔ 255	0–100%
–	9	7	Yellow 1	000 ⇔ 255	0–100%
–	10	8	Orange 1	000 ⇔ 255	0–100%
–	–	9	Red 2	000 ⇔ 255	0–100%
–	–	10	Green 2	000 ⇔ 255	0–100%
–	–	11	Blue 2	000 ⇔ 255	0–100%
–	–	12	White 2	000 ⇔ 255	0–100%
–	–	13	Cyan 2	000 ⇔ 255	0–100%
–	–	14	Magenta 2	000 ⇔ 255	0–100%
–	–	15	Yellow 2	000 ⇔ 255	0–100%
–	–	16	Orange 2	000 ⇔ 255	0–100%
–	–	17	Red 3	000 ⇔ 255	0–100%
–	–	18	Green 3	000 ⇔ 255	0–100%
–	–	19	Blue 3	000 ⇔ 255	0–100%
–	–	20	White 3	000 ⇔ 255	0–100%
–	–	21	Cyan 3	000 ⇔ 255	0–100%
–	–	22	Magenta 3	000 ⇔ 255	0–100%
–	–	23	Yellow 3	000 ⇔ 255	0–100%
–	–	24	Orange 3	000 ⇔ 255	0–100%
–	11	25	Strobe	000 ⇔ 005	No function
				006 ⇔ 255	Strobe, slow to fast

3Ch	12Ch	28Ch	Function	Value	Percent/Setting
-	-	26	Program	000	No function
				001 ⇔ 250	Automatic program
				251 ⇔ 255	Sound-active program
-	-	27	Program speed (when Ch. 26 is 001 ⇔ 250)	000 ⇔ 255	Automatic program speed, slow to fast
			Sound sensitivity (when Ch. 26 is 251 ⇔ 255)	000 ⇔ 255	Sound sensitivity, low to high
3	12	28	Motor rotation	000 ⇔ 127	Motor indexing
				128 ⇔ 189	Motor rotation, fast to slow
				190 ⇔ 193	Stop
				194 ⇔ 255	Reverse motor rotation, slow to fast

## Configuration (Standalone)

Set the product in one of the standalone modes to control without a DMX controller.



**Never connect a product that is operating in any standalone mode to a DMX string connected to a DMX controller. Products in standalone mode may transmit DMX signals that could interfere with the DMX signals from the controller.**

### Automatic Programs

To run the Rotosphere HP with an automatic program, follow the instructions below.

1. Press **<MENU>** repeatedly until **P--** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to select the desired program from **P 1–5**.
4. Press **<ENTER>**.

### Automatic Program Speed

To set the speed of the automatic program, do the following:

1. Press **<MENU>** repeatedly until **S--** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to increase or decrease the program speed, from **S001–100**.
4. Press **<ENTER>**.

### Motor Rotation Speed

To set the motor rotation speed for programs and static colors, follow the instructions below:

1. Press **<MENU>** repeatedly until **Mot** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to increase or decrease the rotation speed, from **M000–100**.
4. Press **<ENTER>**.

### Preset Static Colors

To run the Rotosphere HP with a preset static color, do the following:

1. Press **<MENU>** repeatedly until **C--** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to select the desired color from **C001–015**.
4. Press **<ENTER>**.

### Sound-Active Mode

To run the Rotosphere HP with a sound-active program, follow the instructions below.

1. Press **<MENU>** repeatedly until **Snd** shows on the display.
2. Press **<ENTER>**.
3. Press **<ENTER>** to select how the product will respond when no sound is detected, from **bo** (blackout), or **SLoU** (slow down).
4. Press **<ENTER>**.

## Sound Sensitivity

To set the sound sensitivity of the product, do the following:

1. Press **<MENU>** repeatedly until **SEnS** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to increase or decrease the sound sensitivity, from **u001-100**.
4. Press **<ENTER>**.



The product will only respond to low frequencies of music (bass and drums).

## Custom Color Mixing

To run the Rotosphere HP with a custom static color, follow the instructions below.

1. Press **<MENU>** repeatedly until **U--** shows on the display.
2. Press **<ENTER>**.
3. Press **<ENTER>** to cycle through the options, **r\_ \_ \_** (red), **G\_ \_ \_** (green), **b\_ \_ \_** (blue), **U\_ \_ \_** (white), **C\_ \_ \_** (cyan), **M\_ \_ \_** (magenta), **y\_ \_ \_** (yellow), **o\_ \_ \_** (orange), **S\_ \_ \_** (strobe speed), **DI\_** (rotation direction), and **M\_ \_ \_** (motor speed).
4. Use **<UP>** or **<DOWN>** to increase or decrease the selected value from **\_000-255**, or to select the rotation direction from **DI-L** (left) or **DI-R** (right).
5. Repeat steps 3-4 until the product output is set as desired.

## IRC-6 Infrared Remote Control


The Rotosphere HP is compatible with the IRC-6 infrared remote control from Chauvet.

To enable or disable IRC-6 functionality, do the following:

1. Press **<MENU>** repeatedly until **SEt** shows on the display.
2. Press **<ENTER>**.
3. Press **<ENTER>** to select from **on** (enable), or **off** (disable).
4. Press **<ENTER>**.

Consult the table below to operate the Rotosphere HP with the IRC-6.

IRC-6	Button	Function
	<b>&lt;AUTO&gt;</b>	Press to activate automatic mode, then use <b>&lt;+&gt;</b> or <b>&lt;-&gt;</b> to increase or decrease speed
	<b>&lt;SOUND&gt;</b>	Press to activate sound-active mode, then use <b>&lt;+&gt;</b> or <b>&lt;-&gt;</b> to increase or decrease sensitivity
	<b>&lt;STROBE&gt;</b>	Press to toggle strobe, then use <b>&lt;+&gt;</b> or <b>&lt;-&gt;</b> to increase or decrease strobe speed
	<b>&lt;%&gt;</b>	Press then use <b>&lt;+&gt;</b> or <b>&lt;-&gt;</b> to increase or decrease the dimmer
	<b>&lt;+&gt;</b>	Press to increase speed, sensitivity, or the dimmer
	<b>&lt;-&gt;</b>	Press to decrease speed, sensitivity, or the dimmer
	<b>&lt;0&gt;</b>	Sets colors to red, green, blue, white, cyan, magenta, yellow, and orange
	<b>&lt;1&gt;</b>	Sets color to red
	<b>&lt;2&gt;</b>	Sets color to orange
	<b>&lt;3&gt;</b>	Sets color to yellow
	<b>&lt;4&gt;</b>	Sets color to green
	<b>&lt;5&gt;</b>	Sets color to cyan
	<b>&lt;6&gt;</b>	Sets color to blue
	<b>&lt;7&gt;</b>	Sets color to magenta
	<b>&lt;BLACK OUT&gt;</b>	Press to turn off all the lights until the button is pressed again. NOTE: The IRC-6 will not respond to any inputs when Black Out is activated. If the product does not respond when a button is pressed, try pressing <b>&lt;BLACK OUT&gt;</b> . Black Out may have been activated.

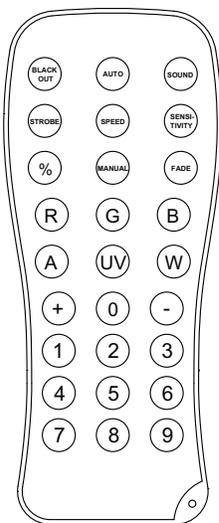

## Master/Slave Mode

The Master/Slave mode allows a single Rotosphere HP product (the “master”) to control the actions of one or more Rotosphere HP products (the “slaves”) without the need of a DMX controller. The master product will be set to operate in either standalone mode or with the IRC-6, while the slave products will be set to operate in slave mode. Once set and connected, the slave products will operate in unison with the master product.

Configure the products as indicated below.

### Slave products:

1. Press **<MENU>** repeatedly until **3Ch** shows on the display.
2. Press **<ENTER>**.
3. Use **<UP>** or **<DOWN>** to set the starting address to **A001**.
4. Press **<ENTER>**.
5. Connect the DMX input of the first slave product to the DMX output of the master product.
6. Connect the DMX input of the subsequent slave products to the DMX output of the previous slave product.
7. Finish setting and connecting all the slave products.

### Master product:

1. Set the master product to operate in standalone mode or with the IRC-6.
2. Make the master product the first product in the DMX daisy chain.



- **Configure all the slave products before connecting the master to the daisy chain.**
- **Never connect a DMX controller to a DMX string configured for Master/Slave operation because the controller may interfere with the signals from the master.**
- **Do not connect more than 31 slaves to the master.**

# 5. Maintenance

## Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean all lighting products at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

1. Unplug the product from power.
2. Wait until the product is at room temperature.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
6. Softly drag any dirt or grime to the outside of the transparent surface.
7. Gently polish the transparent surfaces until they are free of haze and lint.



**Always dry the transparent surfaces carefully after cleaning them.**

## 6. Technical Specifications

### Dimensions and Weight

Length	Width	Height	Weight
11 in (266 mm)	13 in (319 mm)	17 in (419 mm)	9 lb (4.0 kg)

**Note:** Dimensions in inches are rounded.

### Power

Power Supply Type	Range	Voltage Selection
Switching (internal)	100 to 240 VAC, 50/60 Hz	Auto-ranging
Parameter	120 V, 60 Hz	230 V, 50 Hz
Consumption	75 W	73 W
Operating Current	0.9 A	0.6 A
Power linking current (products)	8 A (8 products)	8 A (13 products)
Fuse	T 2 A, 250 V	T 2 A, 250 V
Power I/O	U.S./Worldwide	UK/Europe
Power input connector	IEC	IEC
Power output connector	Edison	IEC
Power Cord plug	Edison (U.S.)	Local Plug

### Light Source

Type	Color	Quantity	Power	Current	Lifespan
LED	RGBW	5	7 W	3 A	50,000 hours
	CMYO	5			

### Photometrics

Strobe Rate	Coverage Angle	Rotation Speed
0 to 20 Hz	360°	2 to 19 rpm

### Thermal

Maximum External Temperature	Cooling System
104 °F (40 °C)	Convection

### DMX

I/O Connector	Channel Range
3-pin XLR	3, 12, or 28

### Ordering

Product Name	Item Code	UPC Number
Rotosphere HP	07052005	781462223533



## Contact Us

General Information	Technical Support
<b>Chauvet World Headquarters</b>	
Address: 3360 Davie Rd. Davie, FL 33314 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084	Voice: (844) 393-7575 Fax: (954) 756-8015 Email: <a href="mailto:chauvetcs@chauvetlighting.com">chauvetcs@chauvetlighting.com</a>  Website: <a href="http://www.chauvetdj.com">www.chauvetdj.com</a>
<b>Chauvet U.K.</b>	
Address: Pod 1 EVO Park Little Oak Drive, Sherwood Park Nottinghamshire, NG15 0EB UK Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110	Email: <a href="mailto:UKtech@chauvetlighting.eu">UKtech@chauvetlighting.eu</a>  Website: <a href="http://www.chauvetdj.eu">www.chauvetdj.eu</a>
<b>Chauvet Benelux</b>	
Address: Stokstraat 18 9770 Kruishoutem Belgium Voice: +32 9 388 93 97	Email: <a href="mailto:BNLtech@chauvetlighting.eu">BNLtech@chauvetlighting.eu</a>  Website: <a href="http://www.chauvetdj.eu">www.chauvetdj.eu</a>
<b>Chauvet France</b>	
Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59	Email: <a href="mailto:FRtech@chauvetlighting.fr">FRtech@chauvetlighting.fr</a>  Website: <a href="http://www.chauvetdj.eu">www.chauvetdj.eu</a>
<b>Chauvet Germany</b>	
Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20	Email: <a href="mailto:DEtech@chauvetlighting.de">DEtech@chauvetlighting.de</a>  Website: <a href="http://www.chauvetdj.eu">www.chauvetdj.eu</a>
<b>Chauvet Mexico</b>	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 690-2010	Email: <a href="mailto:servicio@chauvet.com.mx">servicio@chauvet.com.mx</a>  Website: <a href="http://www.chauvetdj.mx">www.chauvetdj.mx</a>

## Warranty & Returns

For warranty terms and conditions and return information, please visit our website.

For customers in the United States and Mexico: [www.chauvetlighting.com/warranty-registration](http://www.chauvetlighting.com/warranty-registration).

For customers in the United Kingdom, Republic of Ireland, Belgium, the Netherlands, Luxembourg, France, and Germany: [www.chauvetlighting.eu/warranty-registration](http://www.chauvetlighting.eu/warranty-registration).