



ASSEMBLY INSTRUCTION


NP3TT-1 0.173" (4.4 mm) BANTAM-TYPE MINIATURE PLUGS



2. Cable preparation



3.) Insert the prepared cable into the connector




4. Soldering

Solder the inner leads to the solder cups. Make sure that the central cup is properly covered with solder thus securing the threaded joint between tip and cup.



5. Hex-Crimping


To connect the ground and for proper cable retention: crimp the rear part of the connector with the NEUTRIK Crimp tool.

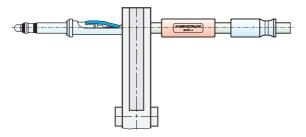

(6.) Move forward bushing and cover as far as easily possible.



Recommendation: Check electrical connection before final assembly.

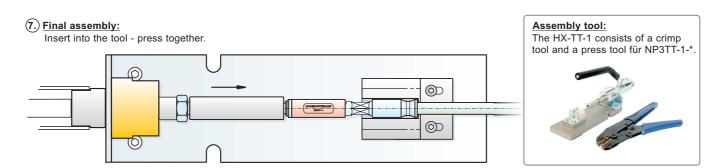

NEUTRIK AG LI NEUTRIK Zürich AG CH NEUTRIK USA Inc. USA NEUTRIK (UK) Ltd. UK T: +423/2372424 F: +423/2325393
T: +41 44/7365010 F: +41 44/736 5011
T: +1732/9019488 F: +1732/9019608
T: +44 1983/811441 F: +44 1983/811439

NEUTRIK Vertriebs GmbH
NEUTRIK France
NEUTRIK Tokyo Ltd.
NEUTRIK Hong Kong Ltd.

DE/NL/AT T: +49 8131/280 890 F: +49 8131/280 830 FR T: +33 1/4131 6750 F: +33 1/4131 0511 JP T: +81 3/3663 4793 F: +81 3/3663 4796 HK T: +852/2687 6055 F: +852/2687 6055

Draft. Nr.: BDA 030 / 3102M1341 | Update: 28.09.2009 | Data subject to change without prior notice. ©2009 NEUTRIK*. ALL RIGHTS RESERVED.

