


ROGUE



User Manual

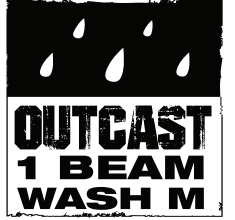

Model ID: ROGUEOUTCAST1BEAMWASHM



Edition Notes

The Rogue Outcast 1 BeamWash M User Manual includes a description, safety precautions, installation, programming, operation, and maintenance instructions for the Rogue Outcast 1 BeamWash M as of the release date of this edition.

Trademarks

Chauvet, Chauvet Professional, the Chauvet logo, and Rogue are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice

The works of authorship contained in this manual, including, but not limited to, all designs, text, and images are owned by Chauvet.

© Copyright 2025 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document Printing

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage, or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident, or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision. However, Chauvet has no obligation to make, and does not commit to make, any such revisions.

Document Revision

Go to www.chauvetprofessional.com for the latest version.

| Revision | Date | Description |
|----------|---------|--|
| 2 | 12/2025 | Added M fixture safety notes and maintenance instructions. |

TABLE OF CONTENTS

1. Before You Begin 1

 What Is Included 1

 Claims 1

 Text Conventions 1

 Symbols 1

 Safety Notes..... 2

 FCC Statement of Compliance 3

 Expected LED Lifespan..... 3

2. Introduction 4

 Features 4

 Product Overview 4

 Product Dimensions 5

3. Setup 6

 AC Power 6

 AC Plug 6

 Fuse Replacement 6

 DMX Linking 6

 DMX Connection 6

 DMX Personalities..... 6

 Remote Device Management..... 6

 USB Software Update 7

 Mounting 8

 Orientation..... 8

 Rigging 8

 Procedure..... 8

4. Operation 9

 Control Panel Description 9

 Control Options 9

 Programming..... 9

 Menu Map 10

 DMX Configuration..... 13

 DMX Personalities..... 13

 Starting Address..... 13

 DMX Channel Assignments and Values 14

 Zones for DMX Control 14

 Preset Color Chart 14

 Background Color Chart..... 16

 LED Macro Chart 16

 Strobe Chart..... 17

 Control Chart..... 17

 135Ch / 111Ch / 64Ch 18

 Settings Configuration..... 23

 Pan Reverse 23

 Tilt Reverse 23

 Pan Angle..... 23

| | |
|--|-----------|
| Tilt Angle | 23 |
| Fan Mode | 23 |
| Display Backlight Timer..... | 23 |
| Screen Reverse | 23 |
| Dimmer Curve | 23 |
| Dimmer Speed | 23 |
| Pulse Width Modulation | 24 |
| LED Power | 24 |
| Ring Power..... | 24 |
| Red Shift | 24 |
| White Mode | 24 |
| Color Calibration | 24 |
| USB Update | 24 |
| Reset Function | 24 |
| Factory Reset..... | 25 |
| Standalone Configuration..... | 25 |
| Auto Test..... | 25 |
| Manual Mode | 25 |
| System Information | 25 |
| Offset Mode (Zero Adjust)..... | 25 |
| Error Codes..... | 26 |
| 5. Maintenance..... | 27 |
| Marine Fixture Maintenance..... | 27 |
| Overview | 27 |
| Maintenance..... | 27 |
| Torque Measurements | 28 |
| Vacuum Test Measurements | 28 |
| 6. Technical Specifications | 29 |
| Contact Us | 30 |
| Warranty & Returns..... | 30 |

Before You Begin

1. Before You Begin

What Is Included

- Rogue Outcast 1 BeamWash M
- 2 Omega brackets with mounting hardware (2 Allen Key bolts)
- Display cover
- Quick Reference Guide

Claims

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.




If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate a claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Text Conventions

| Convention | Meaning |
|----------------------|--|
| 1–512 | A range of values |
| 50/60 | A set of values of which only one can be chosen |
| Settings | A menu option not to be modified |
| <ENTER> | A key to be pressed on the product's control panel |

Symbols

| Symbol | Meaning |
|---|---|
|  | Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator. |
|  | Important installation or configuration information. The product may not function correctly if this information is not used. |
|  | Useful information. |



Any reference to data or power connections in this manual assumes the use of Seetronic IP-rated cables.

The term “DMX” used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.



Connection of the control signal: DMX line

- The product has XLR sockets for DMX input and output.
- **Notice:** This control circuit is isolated and belongs to the Class 2 data port. The control circuit has a cumulative leakage current of less than 3.5 mA.

Safety Notes

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

- The luminaire is intended for professional use only.
- The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 18.04 ft (5.5 m) is not expected.
- If the external flexible cable or cord of this luminaire is damaged, it shall be replaced by a special cord or cord exclusively available from the manufacturer or its service agent.
- The light source contained in this luminaire shall only be replaced by the manufacturer or its service agent or a similar qualified person.
- **CAUTION:**
 - This product's housing may be hot when operating. Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
 - When transferring the product from extreme temperature environments, (e.g., cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow the product to fully acclimate to the surrounding environment before connecting it to power.
 - Flashing light is known to trigger epileptic seizures. User must comply with local laws regarding notification of strobe use.
- **ALWAYS:**
 - Disconnect from power before cleaning the product or replacing the fuse.
 - When using an IP65-rated product in an outdoor environment, use IP65- (or higher) rated power and data cable.
 - Replace and secure IP-rated protective covers to all power, data, USB, or other ports when not in use.
 - Replace the fuse with the same type and rating.
 - Use a safety cable when mounting this product overhead.
 - Connect this product to a grounded and protected circuit.
 - Create a drip loop to ensure appropriate space for maintenance and prevent water from accumulating at the end of the wire around the fixture.
 - Whenever possible, install the fixture so that the connections panel faces downwards in wet environments.
- **DO NOT:**
 - Open this product. It contains no user-serviceable parts.
 - Look at the light source when the product is on.
 - Leave any flammable material within 20 cm of this product while operating or connected to power.
 - Connect this product to a dimmer or rheostat.
 - Operate this product if the housing, lenses, or cables appear damaged.
 - Submerge this product (adhere to standards for the published IP rating). Regular outdoor operation is fine.
 - Mount the fixture in direct contact with other metals, as this may encourage corrosion.
 - Permanently install outdoors in locations with extreme environmental conditions. This includes, but is not limited to:
 - Locations where normal temperatures exceed the temperature ranges in this manual.
 - Locations that are prone to flooding or being buried in snow.
 - Other areas where the product will be subject to extreme radiation or caustic substances.
 - Use for space-heating purposes.
- **ONLY** use the hanging/mounting bracket to carry this product.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate this product at higher temperatures.
- The minimum startup temperature is -4°F (-20°C). Do not start the product at lower temperatures.

Before You Begin

- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- In the event of a serious operating problem, stop using immediately.



If this Chauvet product requires service, contact Chauvet Technical Support.

FCC Statement of Compliance

This device complies with Part 15 Part B of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Expected LED Lifespan


Over time, use and heat will gradually reduce LED brightness. Clustered LEDs produce more heat than single LEDs, contributing to shorter lifespans if always used at full intensity. The average LED lifespan is 40,000 to 50,000 hours. To extend LED lifespan, maintain proper ventilation around the product, and limit the overall intensity.

2. Introduction

Features

- Fully featured RGBW LED IP66-rated yoke wash fixture with zoom and RGB LED ring
- C5M Paint application process and full aluminum construction for extended outdoor usage in and near marine environments
- Included display cover for extended outdoor usage in and near marine environments
- Stainless steel gland nuts for extended outdoor usage in and near marine environments
- 16-bit dimming of master dimmer as well as individual colors for smooth control of fades
- 7 RGBW LEDs, 45 W each
- 12 zone pixel-mappable RGB LED outer ring under a stealth filter for added effect possibilities
- Pre-built programs for outer LED ring with the ability to easily control dimming, rate, foreground, and background colors
- Unique lens design for excellent color blending and tight beam effects
- Extremely fast, smooth pan and tilt movement
- RDM-enabled for remote addressing and trouble shooting
- Selectable PWM settings for camera operation
- Zoom Range: 3.9° to 55.3° for maximum coverage
- User selectable calibrated white for 7500 K at full output
- 6 distinct dimming modes for advanced control
- Easy-to-read OLED display with simple, effective menu options
- Simple and complex DMX channel profiles for programming versatility
- USB-C port for uploading software


Product Overview

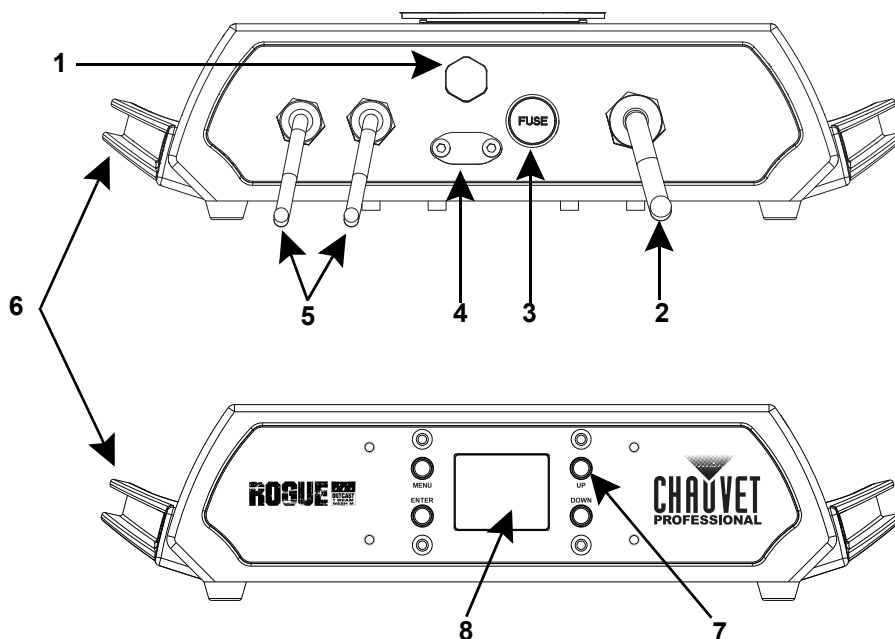

| # | Name | # | Name |
|---|--------------------|---|---------------|
| 1 | Condensation valve | 5 | DMX in/out |
| 2 | Power input | 6 | Carry handles |
| 3 | Fuse | 7 | Menu buttons |
| 4 | USB-C port | 8 | LCD display |

Introduction

Product Dimensions

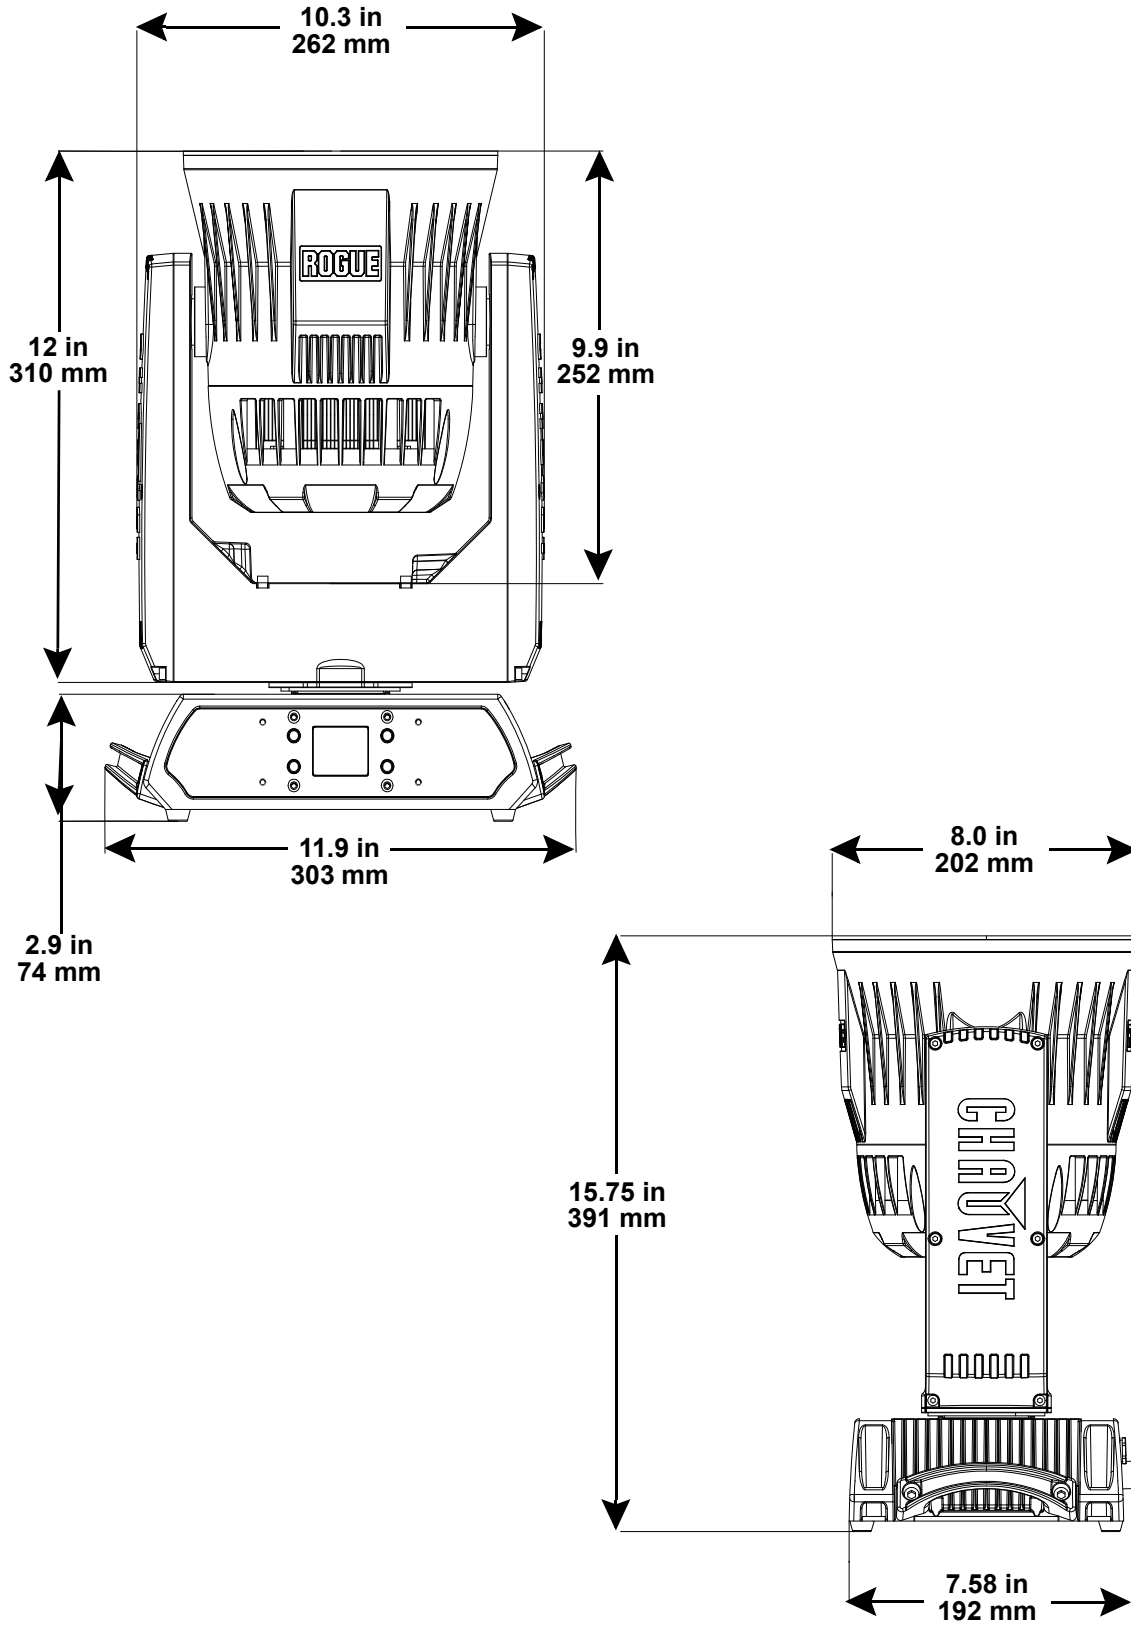

3. Setup

AC Power

The Rogue Outcast 1 BeamWash M has an auto-ranging power supply and it can work with an input voltage range of 100 to 240 VAC, 50/60 Hz.

To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart. The listed current rating indicates the product's average current draw under normal conditions.



- **Always connect the product to a protected circuit (a circuit breaker or fuse). Ensure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.**
- **To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.**



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

AC Plug

The Rogue Outcast 1 BeamWash M comes with a termination-ready, bare-ended power input cable. If the power cable which came with the product has no plug, or if it is necessary to change the plug, use the table below to wire a plug.

| Connection | Wire (U.S.) | Wire (Europe) | Screw Color |
|------------|--------------|---------------|-----------------|
| AC Live | Black | Brown | Yellow or Brass |
| AC Neutral | White | Blue | Silver |
| AC Ground | Green/Yellow | Green/Yellow | Green |

Fuse Replacement

1. Disconnect this product from the power outlet.
2. Using a flat-head screwdriver, unscrew the fuse holder cap from the housing.
3. Remove the blown fuse and replace with another fuse of the same type and rating (8A, 250 V).
4. Screw the fuse holder cap back in place and reconnect power.

DMX Linking

The Rogue Outcast 1 BeamWash M can link to a DMX controller using a DMX connection. For more information about DMX, read the DMX primer at:

https://www.chauvetprofessional.com/wp-content/uploads/2016/06/DMX_Primer.pdf.

DMX Connection

The Rogue Outcast 1 BeamWash M provides a DMX-512 connection using a bare-ended signal cable.

| DMX Plug | Signal Connector | Pin | Function | Clip | Wire | DMX Cable |
|----------|------------------|-----|----------|-------|--------|-----------|
| | | 1 | Ground | Black | Ground | |
| | | 2 | Data - | Green | Red | |
| | | 3 | Data + | Red | Yellow | |
| | | 4 | N/A | | | |
| | | 5 | N/A | | | |

DMX Personalities

The Rogue Outcast 1 BeamWash M uses a 5-pin DMX data connection for its 6 DMX personalities, ranging from **15Ch, 24Ch, 30Ch, 37Ch, 64Ch, 111Ch, to 135Ch**.

- Refer to the [Operation](#) chapter to learn how to configure the Rogue Outcast 1 BeamWash M to work in these personalities.
- The [DMX Personalities](#) section provides detailed information regarding the DMX personalities.

Remote Device Management

Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Manual or with the manufacturer as not all DMX controllers have this capability. The Rogue Outcast 1 BeamWash M supports RDM protocol that allows feedback to make changes to menu map options.

USB Software Update

The Rogue Outcast 1 BeamWash M allows for software updates with a USB device using the built-in USB port. To update the software using a USB type C flash drive, do the following:

1. Power on the product, and plug the flash drive into the USB port.
2. Once the flash drive has been detected, the message **"USB UPDATE"** will be displayed. Select **YES**.
3. The next screen will show the software versions available for this fixture on the USB drive. For multiple versions of the software for the same fixture, use **<UP>** or **<DOWN>** to select the desired version. Press **<ENTER>**.
4. The **"USB UPDATE"** screen will re-appear. Select **YES**.



It is possible to update multiple units with the USB if they are daisy chained via DMX.

5. The upgrade will start. **DO NOT** turn off the power or disconnect the USB while the USB LED is still blinking during the process. The screen display will read: **"USB Update Wait"**. The update can take several minutes to complete.
6. When the update is completed, the fixture will automatically reboot.
7. Go to Fixture Information on the product's menu map and confirm the firmware revision.
8. When the boot-up process is finished, restart the product.



- **Place the .chl file in the root directory of the USB drive.**
- **The product's USB port supports up to 32GB capacity and only works with FAT32 file format.**



Turning off the power or removing the USB while the USB LED is still blinking during the update will cause partial or total firmware failure in the targeted fixture(s). If this occurs, the user will need the UPLOAD 08 device to fix this. Please contact Chauvet regarding this device.

Mounting

Before mounting the product, read and follow the safety recommendations indicated in the [Safety Notes](#).

Orientation

Always mount this product in a safe position, making sure there is adequate room for ventilation, configuration, and maintenance.

Rigging


Chauvet recommends using the following general guidelines when mounting this product.

- Before deciding on a location for the product, make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure and attachment points can support the weight before hanging the product (see the [Technical Specifications](#) for weight information).
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power-linking cables to reach.

Procedure

The Rogue Outcast 1 BeamWash M comes with 2 Omega brackets. The user can directly attach a mounting clamp (sold separately) to the Omega brackets. Make sure the clamp is capable of supporting the weight of this product. For the Chauvet Professional line of mounting clamps, go to <http://www.trusst.com/products>.

Mounting Diagram

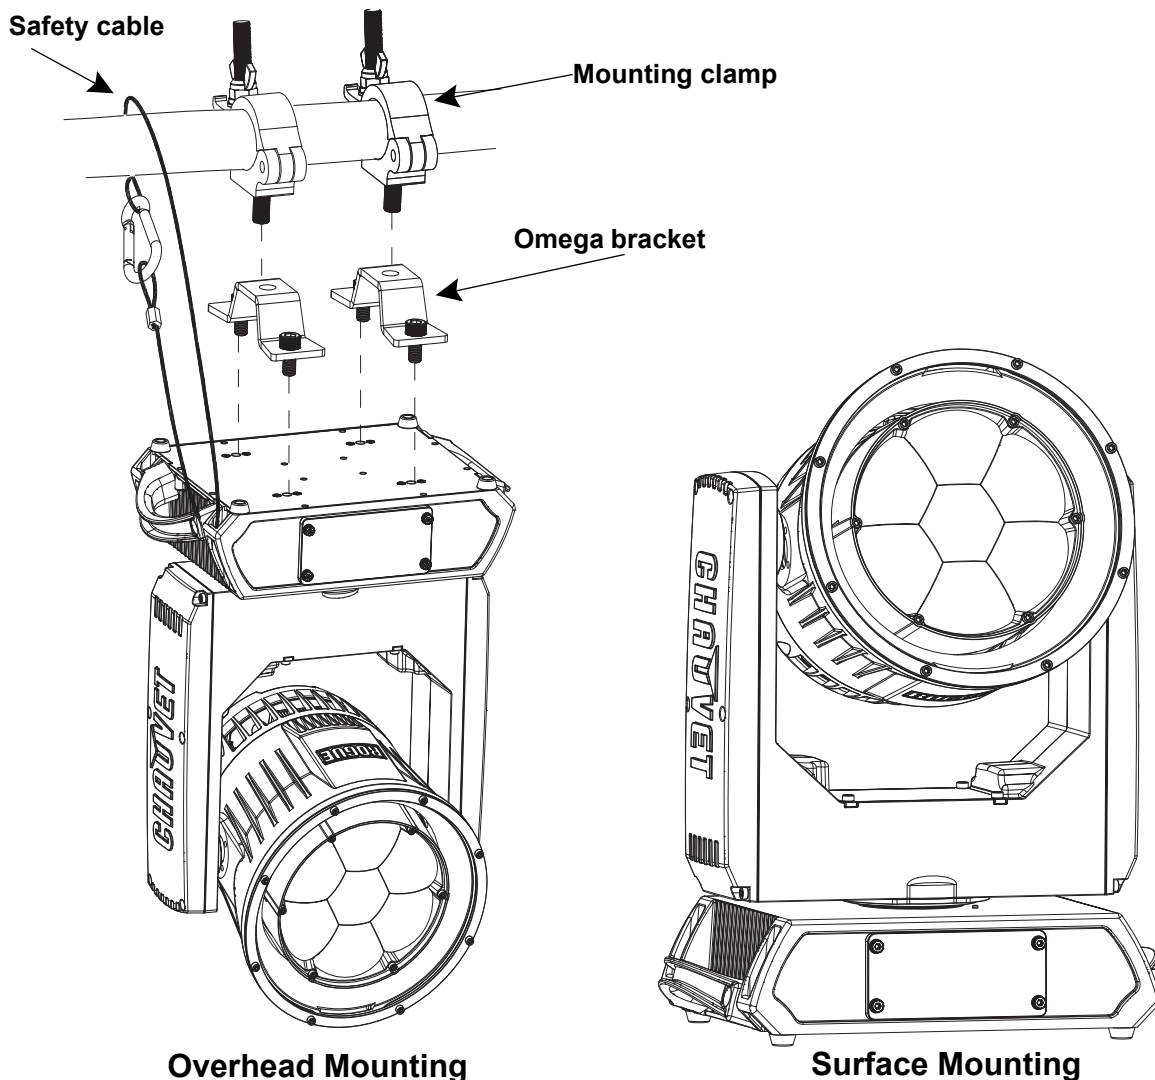

4. Operation

Control Panel Description

| Button/Knob | Function |
|-------------|--|
| <MENU> | Exits from the current menu or function |
| <ENTER> | Enables the currently displayed menu or sets the selected value into the selected function |
| <UP> | Navigates upwards through the menu list or increases the numeric value when in a function |
| <DOWN> | Navigates downwards through the menu list or decreases the value when in a function |

Control Options

Set the Rogue Outcast 1 BeamWash M starting address in the **001-378** DMX range. This enables control of up to 2 products in the 135-channel 6Ch personality.

Programming

Refer to the menu map to understand the menu options. The menu map shows the main menu and a variable number of programming levels for each option.

- To access the main menu, press **<MENU>**.
- To navigate to the desired option in the main menu, use **<UP>** or **<DOWN>** to navigate directly.
- Press **<ENTER>** to select the indicated option.
- Use **<UP>** or **<DOWN>** to navigate within a programming level until the desired option is indicated.
- To return to the main menu, press **<MENU>**.

Menu Map

Refer to the Rogue Outcast 1 BeamWash M product page on www.chauvetprofessional.com for the latest menu map.

| Main Level | Programming Levels | | Description | | |
|--------------------|--------------------|------------------------|-----------------------------|--|--|
| Address | 001–512 | | Sets the starting address | | |
| DMX | 15CH | | Selects the DMX personality | | |
| | 24CH | | | | |
| | 30CH | | | | |
| | 37CH | | | | |
| | 64CH | | | | |
| | 111CH | | | | |
| | 135CH | | | | |
| | Auto Test | | | Auto test all functions | |
| | Run Mode | Crossfade (sec) | | Sets the time between step in seconds | |
| | | Hold time (sec) | | 0000–1200 Sets the playback time for each step in seconds | |
| | | | Clear | NO | Resets all step 1/2 manual values to 0 |
| | | | | YES | |
| | | | Delete | NO | Removes step 1/2 from playback |
| | | | | YES | |
| Manual Test | | Step 1–2 | Pan | 0–255 Manually control and test all settings through the control panel | |
| | | | Tilt | | |
| | | | Dimmer | | |
| | | | Shutter | | |
| | | | Red 1 | | |
| | | | Green 1 | | |
| | | | Blue 1 | | |
| | | | Red 2 | | |
| | | | Green 2 | | |
| | | | Blue 2 | | |
| | | | Red 3 | | |
| | | | Green 3 | | |
| | | | Blue 3 | | |
| | | | Red 4 | | |
| | | | Green 4 | | |
| | | | Blue 4 | | |
| | | | Red 5 | | |
| | | | Green 5 | | |
| | | | Blue 5 | | |
| | | | Red 6 | | |
| | | | Green 6 | | |
| | | | Blue 6 | | |
| | Red 7 | | | | |
| | Green 7 | | | | |
| Blue 7 | | | | | |
| Red 8 | | | | | |

Operation



| Main Level | Programming Levels | | | Description | |
|---------------------|------------------------|-----------------------|--|-------------|--|
| Run Mode (cont.) | Manual Test (cont.) | Step 1–2 (cont.) | Green 8 | 0–255 | Manually control and test all settings through the control panel |
| | | | Blue 8 | | |
| | | | Red 9 | | |
| | | | Green 9 | | |
| | | | Blue 9 | | |
| | | | Red 10 | | |
| | | | Green 10 | | |
| | | | Blue 10 | | |
| | | | Red 11 | | |
| | | | Green 11 | | |
| | | | Blue 11 | | |
| | | | Red 12 | | |
| | | | Green 12 | | |
| | | | Blue 12 | | |
| | | | Red 13 | | |
| | | | Green 13 | | |
| Blue 13 | | | | | |
| White 13 | | | | | |
| Zoom | | | | | |
| Setup | Pan Reverse | OFF | Normal pan | | |
| | | ON | Reversed pan | | |
| | Tilt Reverse | OFF | Normal tilt | | |
| | | ON | Reversed tilt | | |
| | Pan Angle | 540 | 540° pan range | | |
| | | 360 | 360° pan range | | |
| | | 180 | 180° pan range | | |
| | Tilt Angle | 260 | 260° tilt range | | |
| | | 180 | 180° tilt range | | |
| | | 90 | 90° tilt range | | |
| | Fans | Auto | Fan speed according to product temperature | | |
| | | Full | Fan speed set on high | | |
| | | ECO | Quiet mode | | |
| | Display | OFF | Display times out | | |
| | | ON | Display stays on | | |
| | Screen Rev | OFF | Normal screen display | | |
| | | ON | Inverted screen display | | |
| | Dimmer Curve | Linear | Set the dimmer curve | | |
| Square | | | | | |
| I Squa | | | | | |
| SCurve | | | | | |
| Dimmer Speed | Smooth | Sets the dimmer speed | | | |
| | Fast | | | | |

| Main Level | Programming Levels | | | Description | |
|------------------|--------------------|---------|---|---|------------------------------------|
| Setup (cont.) | PWM Option | 600Hz | | Sets the Pulse Width Modulation frequency | |
| | | 1200Hz | | | |
| | | 2000Hz | | | |
| | | 4000Hz | | | |
| | | 6000Hz | | | |
| | | 15000Hz | | | |
| | LED R POWER | 050–100 | | Sets red LED power | |
| | LED G POWER | 050–100 | | Sets green LED power | |
| | LED B POWER | 050–100 | | Sets blue LED power | |
| | LED W POWER | 050–100 | | Sets white LED power | |
| | RING R POWER | 050–100 | | Sets red ring power | |
| | RING G POWER | 050–100 | | Sets green ring power | |
| | RING B POWER | 050–100 | | Sets blue ring power | |
| | Red Shift | OFF | | Enables/disables red shift | |
| | | ON | | | |
| | White Mode | On | | | Calibrates white to 7500K |
| | | Off | | | Uses maximum output values |
| | | Custom | RED | 000–255 | Sets red LED maximum value |
| | | | GREEN | | Sets green LED maximum value |
| | | | BLUE | | Sets blue LED maximum value |
| | WHITE | | Sets white LED maximum value | | |
| | Color Calibration | On | | | Uses factory default white setting |
| | | Off | | | Uses maximum output values |
| Custom | | RED | 100–255 | Sets red LED maximum value | |
| | | GREEN | | Sets green LED maximum value | |
| | | BLUE | | Sets blue LED maximum value | |
| USB Update | NO | | Enables/disables updating firmware through USB | | |
| | YES | | | | |
| Reset Function | Pan/Tilt | NO | Reset individual functions or all functions from start-up | | |
| | | YES | | | |
| | Zoom | NO | | | |
| | | YES | | | |
| | All | NO | | | |
| | | YES | | | |
| Factory Settings | NO | | Reset to factory default settings | | |
| | YES | | | | |

Operation

| Main Level | Programming Levels | | Description |
|------------|--------------------|---------|---|
| Sys Info | Ver | V_----- | Shows current firmware version |
| | Running Mode | --- | Shows current running mode |
| | DMX Address | --- | Shows current DMX address |
| | Temperature | -- | Shows the product's temperature in °C |
| | Fixture Time | ---- | Shows number of hours product has been powered on |
| | UID | ----- | Shows product UID |
| | Head Fan1 | ----- | Shows the speed of the fans in rpm |
| | Defrost Fan1 | ----- | |
| | Defrost Fan2 | ----- | |
| | Base Fan1 | ----- | |
| Base Fan2 | ----- | | |

DMX Configuration

Use control configurations to operate the product with a DMX controller.

DMX Personalities

To set the DMX personality:

1. Go to the **Run Mode** main level.
2. Select the **DMX** option..
3. Select the desired personality, from **15Ch, 24Ch, 30Ch, 37Ch, 64Ch, 111Ch, or 135Ch**



- See the [Starting Address](#) section for the highest selectable starting address for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

Starting Address


Each product will respond to a unique starting address from the controller. All products with the same starting address will respond in unison. To set the starting address in DMX mode:

1. Go to the **DMX Address** main level.
2. Select the starting address (**001–498**).

| Personality | Highest Address | Products per Universe |
|-------------|-----------------|-----------------------|
| 15Ch | 498 | 33 |
| 24Ch | 489 | 20 |
| 30Ch | 483 | 16 |
| 37Ch | 476 | 12 |
| 64Ch | 449 | 7 |
| 111Ch | 402 | 3 |
| 135Ch | 378 | 2 |

DMX Channel Assignments and Values

Zones for DMX Control

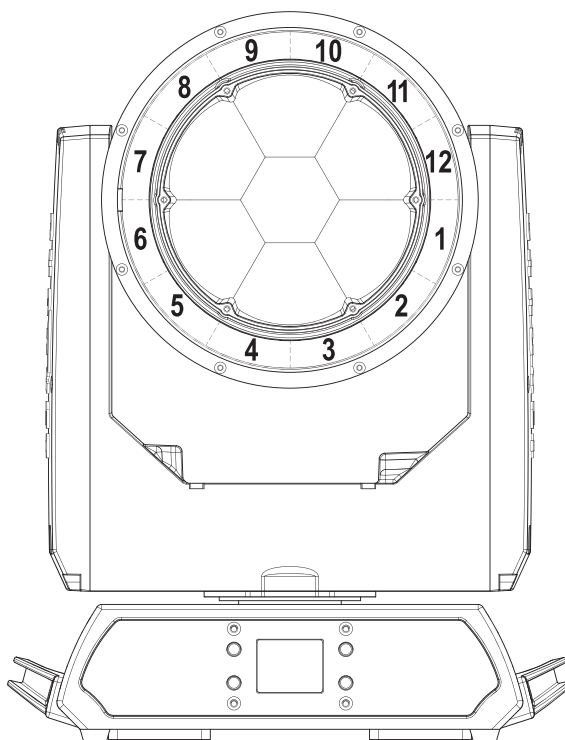

Preset Color Chart

| DMX Value | Function | Red | Green | Blue | White |
|-----------|-------------|-----|-------|------|-------|
| 000 ⇄ 004 | No function | | | | |
| 005 ⇄ 009 | Color 1 | 000 | 000 | 000 | 255 |
| 010 ⇄ 014 | Color 2 | 255 | 235 | 053 | 000 |
| 015 ⇄ 019 | Color 3 | 214 | 134 | 048 | 000 |
| 020 ⇄ 024 | Color 4 | 255 | 000 | 044 | 000 |
| 025 ⇄ 029 | Color 5 | 255 | 059 | 113 | 000 |
| 030 ⇄ 034 | Color 6 | 255 | 138 | 219 | 000 |
| 035 ⇄ 039 | Color 7 | 226 | 175 | 226 | 000 |
| 040 ⇄ 044 | Color 8 | 040 | 001 | 255 | 000 |
| 045 ⇄ 049 | Color 9 | 000 | 000 | 255 | 000 |
| 050 ⇄ 054 | Color 10 | 000 | 078 | 255 | 000 |
| 055 ⇄ 059 | Color 11 | 000 | 199 | 255 | 000 |
| 060 ⇄ 064 | Color 12 | 000 | 255 | 234 | 000 |
| 065 ⇄ 069 | Color 13 | 149 | 246 | 255 | 000 |
| 070 ⇄ 074 | Color 14 | 137 | 255 | 227 | 000 |
| 075 ⇄ 079 | Color 15 | 213 | 220 | 222 | 000 |
| 080 ⇄ 084 | Color 16 | 219 | 232 | 175 | 000 |
| 085 ⇄ 089 | Color 17 | 205 | 255 | 199 | 000 |
| 090 ⇄ 094 | Color 18 | 115 | 255 | 163 | 000 |
| 095 ⇄ 099 | Color 19 | 006 | 255 | 143 | 000 |
| 100 ⇄ 104 | Color 20 | 000 | 255 | 094 | 000 |

Operation

| DMX Value | Function | Red | Green | Blue | White |
|-----------|----------------------------------|-----|-------|------|-------|
| 105 ⇄ 109 | Color 21 | 029 | 255 | 000 | 000 |
| 110 ⇄ 114 | Color 22 | 032 | 223 | 000 | 000 |
| 115 ⇄ 119 | Color 23 | 075 | 255 | 000 | 000 |
| 120 ⇄ 124 | Color 24 | 080 | 232 | 000 | 000 |
| 125 ⇄ 129 | Color 25 | 108 | 226 | 000 | 000 |
| 130 ⇄ 134 | Color 26 | 145 | 194 | 000 | 000 |
| 135 ⇄ 139 | Color 27 | 210 | 255 | 000 | 000 |
| 140 ⇄ 144 | Color 28 | 225 | 232 | 000 | 000 |
| 145 ⇄ 149 | Color 29 | 023 | 215 | 000 | 000 |
| 150 ⇄ 154 | Color 30 | 247 | 214 | 000 | 000 |
| 155 ⇄ 159 | Color 31 | 255 | 163 | 000 | 000 |
| 160 ⇄ 164 | Color 32 | 255 | 152 | 000 | 000 |
| 165 ⇄ 169 | Color 33 | 255 | 108 | 000 | 000 |
| 170 ⇄ 174 | Color 34 | 255 | 255 | 255 | 255 |
| 175 ⇄ 179 | No function | | | | |
| 180 ⇄ 201 | Color fade, fast to slow | | | | |
| 202 ⇄ 207 | Stop | | | | |
| 208 ⇄ 229 | Reverse color fade, fast to slow | | | | |
| 230 ⇄ 234 | No function | | | | |
| 235 ⇄ 249 | Color jump, fast to slow | | | | |
| 250 ⇄ 255 | No function | | | | |

Background Color Chart

| DMX Value | Function | Red | Green | Blue | White |
|-----------|--------------------------|---------|---------|---------|-------|
| 000 | No function | | | | |
| 001 ⇔ 002 | 2700K white | 156 | 118 | 000 | 063 |
| 003 ⇔ 004 | 3200K white | 156 | 141 | 005 | 089 |
| 005 ⇔ 006 | 4200K white | 156 | 141 | 014 | 255 |
| 007 ⇔ 008 | 5600K white | 156 | 207 | 054 | 255 |
| 009 ⇔ 010 | 8000K white | 130 | 255 | 096 | 255 |
| 011 | Blue | 000 | 000 | 255 | 000 |
| 012 ⇔ 048 | Green increases | 000 | 001–254 | 255 | 000 |
| 049 | Cyan | 000 | 255 | 255 | 000 |
| 050 ⇔ 086 | Blue decreases | 000 | 255 | 254–001 | 000 |
| 87 | Green | 000 | 255 | 000 | 000 |
| 088 ⇔ 124 | Red increases | 001–254 | 255 | 000 | 000 |
| 125 | Yellow | 255 | 255 | 000 | 000 |
| 126 ⇔ 162 | Green decreases | 255 | 254–001 | 000 | 000 |
| 163 | Red | 255 | 000 | 000 | 000 |
| 164 ⇔ 200 | Blue increases | 255 | 000 | 001–254 | 000 |
| 201 | Magenta | 255 | 000 | 255 | 000 |
| 202 ⇔ 238 | Red decreases | 254–001 | 000 | 255 | 000 |
| 239 | Blue | 000 | 000 | 255 | 000 |
| 240 ⇔ 247 | Color fade, fast to slow | | | | |
| 248 ⇔ 255 | Color jump, fast to slow | | | | |

LED Macro Chart

| DMX Value | Function | DMX Value | Function | DMX Value | Function |
|-----------|--------------|-----------|--------------|-----------|--------------|
| 000 ⇔ 005 | No function | 076 ⇔ 080 | LED macro 15 | 151 ⇔ 155 | LED macro 30 |
| 006 ⇔ 010 | LED macro 1 | 081 ⇔ 085 | LED macro 16 | 156 ⇔ 160 | LED macro 31 |
| 011 ⇔ 015 | LED macro 2 | 086 ⇔ 090 | LED macro 17 | 161 ⇔ 165 | LED macro 32 |
| 016 ⇔ 020 | LED macro 3 | 091 ⇔ 095 | LED macro 18 | 166 ⇔ 170 | LED macro 33 |
| 021 ⇔ 025 | LED macro 4 | 096 ⇔ 100 | LED macro 19 | 171 ⇔ 175 | LED macro 34 |
| 026 ⇔ 030 | LED macro 5 | 101 ⇔ 105 | LED macro 20 | 176 ⇔ 180 | LED macro 35 |
| 031 ⇔ 035 | LED macro 6 | 106 ⇔ 110 | LED macro 21 | 181 ⇔ 185 | LED macro 36 |
| 036 ⇔ 040 | LED macro 7 | 111 ⇔ 115 | LED macro 22 | 186 ⇔ 190 | LED macro 37 |
| 041 ⇔ 045 | LED macro 8 | 116 ⇔ 120 | LED macro 23 | 191 ⇔ 195 | LED macro 38 |
| 046 ⇔ 050 | LED macro 9 | 121 ⇔ 125 | LED macro 24 | 199 ⇔ 200 | LED macro 39 |
| 051 ⇔ 055 | LED macro 10 | 126 ⇔ 130 | LED macro 25 | 201 ⇔ 205 | LED macro 40 |
| 056 ⇔ 060 | LED macro 11 | 131 ⇔ 135 | LED macro 26 | 206 ⇔ 210 | LED macro 41 |
| 061 ⇔ 065 | LED macro 12 | 136 ⇔ 140 | LED macro 27 | 211 ⇔ 215 | LED macro 42 |
| 066 ⇔ 070 | LED macro 13 | 141 ⇔ 145 | LED macro 28 | 216 ⇔ 255 | No function |
| 071 ⇔ 075 | LED macro 14 | 146 ⇔ 150 | LED macro 29 | | |

Operation

Strobe Chart

| DMX Value | Function | DMX Value | Function |
|-----------|---|-----------|---|
| 000 ⇔ 019 | Off | 150 ⇔ 169 | Random fading strobe 0–100%, fast to slow |
| 020 ⇔ 024 | On | 170 ⇔ 189 | Pulse strobe, fast to slow |
| 025 ⇔ 069 | Strobe, fast to slow | 190 ⇔ 209 | Random pulse strobe, fast to slow |
| 070 ⇔ 089 | Fading strobe 100–0%, fast to slow | 210 ⇔ 229 | Fading strobe 100–0–100%, fast to slow |
| 090 ⇔ 109 | Fading strobe 0–100%, fast to slow | 230 ⇔ 244 | Random pulse strobe, fast to slow |
| 110 ⇔ 129 | Random strobe, fast to slow | 245 ⇔ 255 | On |
| 130 ⇔ 149 | Random fading strobe 100–0%, fast to slow | | |

Control Chart

| DMX Value | Function | DMX Value | Function |
|-----------|--------------------------------------|-----------|------------------------------|
| 000 ⇔ 009 | No function | 105 ⇔ 109 | Reserved for future use |
| 010 ⇔ 014 | Blackout on pan/tilt | 110 ⇔ 114 | Red shift on |
| 015 ⇔ 019 | Preset color HTP on* | 115 ⇔ 119 | Red shift off |
| 020 ⇔ 024 | Preset color HTP off* | 120 ⇔ 124 | Fan mode ECO* |
| 025 ⇔ 029 | Reserved for future use | 125 ⇔ 129 | Fan mode Full* |
| 030 ⇔ 034 | Synchronize ring and center LEDs* | 130 ⇔ 134 | Fan mode Auto* |
| 035 ⇔ 039 | De-synchronize ring and center LEDs* | 135 ⇔ 139 | Dimmer mode fast* |
| 040 ⇔ 044 | Defrost fan on | 140 ⇔ 144 | Dimmer mode smooth* |
| 045 ⇔ 049 | Defrost fan off | 145 ⇔ 149 | Linear dimmer curve |
| 050 ⇔ 054 | Reset pan* | 150 ⇔ 154 | Square dimmer curve |
| 055 ⇔ 059 | Reset tilt* | 155 ⇔ 159 | Inverse square dimmer curve |
| 060 ⇔ 064 | Reset zoom | 160 ⇔ 164 | S-curve dimmer curve |
| 065 ⇔ 069 | Reserved for future use | 165 ⇔ 169 | WHITE mode |
| 070 ⇔ 074 | Reset all* | 170 ⇔ 174 | FULL mode |
| 075 ⇔ 079 | PWM 600 Hz* | 175 ⇔ 179 | Single-color calibration off |
| 080 ⇔ 084 | PWM 1200 Hz* | 180 ⇔ 184 | Single-color calibration on |
| 085 ⇔ 089 | PWM 2000 Hz* | 185 ⇔ 239 | No function |
| 090 ⇔ 094 | PWM 4000 Hz* | 240 ⇔ 247 | Calibration on |
| 095 ⇔ 099 | PWM 6000 Hz* | 248 ⇔ 255 | Calibration off |
| 100 ⇔ 104 | PWM 15000 Hz* | | |

(*Activates in 5 seconds)



Preset Color HTP

When preset color HTP is on, manual color controls may be used at the same time as preset color controls.

When preset color HTP is off, preset color controls will override all manual color controls.

135Ch / 111Ch / 64Ch

| 64CH | 111CH | 135Ch | Function | Value | Percent/Setting |
|------|-------|-------|---------------------|-----------|---|
| 1 | 1 | 1 | Pan | 000 ⇔ 255 | 0–100% |
| 2 | 2 | 2 | Fine pan | 000 ⇔ 255 | Fine control (16-bit) |
| 3 | 3 | 3 | Tilt | 000 ⇔ 255 | 0–100% |
| 4 | 4 | 4 | Fine tilt | 000 ⇔ 255 | Fine control (16-bit) |
| 5 | 5 | 5 | Pan/tilt speed | 000 ⇔ 255 | Fast to slow |
| 6 | 6 | 6 | CTC | 000 | No function |
| | | | | 001 ⇔ 255 | Color temperature, 19000–2700K |
| 7 | 7 | 7 | Ring preset color | 000 ⇔ 255 | See Preset Color Chart (no white) |
| 8 | 8 | 8 | Center preset color | 000 ⇔ 255 | See Preset Color Chart |
| 9 | 9 | 9 | Pattern | 000 | No function |
| | | | | 001 ⇔ 255 | Pattern 1–255 |
| 10 | 10 | 10 | LED macro | 000 ⇔ 255 | See LED Macro Chart |
| 11 | 11 | 11 | LED macro speed | 000 ⇔ 127 | LED macro speed, fast to slow |
| | | | | 128 | Stop |
| | | | | 129 ⇔ 255 | Reverse LED macro, slow to fast |
| 12 | 12 | 12 | LED macro delay | 000 ⇔ 255 | LED macro delay, fast to slow |
| 13 | 13 | 13 | Background color | 000 ⇔ 255 | See Background Color Chart |
| 14 | 14 | 14 | Background dimmer | 000 ⇔ 255 | 0–100% |
| – | 15 | 15 | Bg. fine dimmer | 000 ⇔ 255 | Fine control (16-bit) |
| 15 | 16 | – | Ring dimmer | 000 ⇔ 255 | 0–100% |
| – | 17 | – | Ring fine dimmer | 000 ⇔ 255 | Fine control (16-bit) |
| 16 | 18 | – | Center dimmer | 000 ⇔ 255 | 0–100% |
| – | 19 | – | Center fine dimmer | 000 ⇔ 255 | Fine control (16-bit) |
| – | – | 16 | Master dimmer | 000 ⇔ 255 | 0–100% |
| – | – | 17 | Master fine dimmer | 000 ⇔ 255 | Fine control (16-bit) |
| 17 | 20 | 18 | Ring strobe | 000 ⇔ 255 | See Strobe Chart |
| 18 | 21 | 19 | Center strobe | 000 ⇔ 255 | See Strobe Chart |
| 19 | 22 | 20 | Zoom | 000 ⇔ 255 | Zoom in to zoom out |
| 20 | 23 | 21 | Control | 000 ⇔ 255 | See Control Chart |
| 21 | 24 | 22 | Red | 000 ⇔ 255 | 0–100% |
| – | 25 | 23 | Fine red | 000 ⇔ 255 | Fine control (16-bit) |
| 22 | 26 | 24 | Green | 000 ⇔ 255 | 0–100% |
| – | 27 | 25 | Fine green | 000 ⇔ 255 | Fine control (16-bit) |
| 23 | 28 | 26 | Blue | 000 ⇔ 255 | 0–100% |
| – | 29 | 27 | Fine blue | 000 ⇔ 255 | Fine control (16-bit) |
| 24 | 30 | 28 | White | 000 ⇔ 255 | 0–100% |
| – | 31 | 29 | Fine white | 000 ⇔ 255 | Fine control (16-bit) |
| – | – | 30 | Dimmer 1 | 000 ⇔ 255 | 0–100% |
| – | – | 31 | Fine dimmer 1 | 000 ⇔ 255 | Fine control (16-bit) |
| 25 | 32 | 32 | Red 1 | 000 ⇔ 255 | 0–100% |
| – | 33 | 33 | Fine red 1 | 000 ⇔ 255 | Fine control (16-bit) |
| 26 | 34 | 34 | Green 1 | 000 ⇔ 255 | 0–100% |
| – | 35 | 35 | Fine green 1 | 000 ⇔ 255 | Fine control (16-bit) |
| 27 | 36 | 36 | Blue 1 | 000 ⇔ 255 | 0–100% |
| – | 37 | 37 | Fine blue 1 | 000 ⇔ 255 | Fine control (16-bit) |

Operation

| 64CH | 111CH | 135Ch | Function | Value | Percent/Setting |
|------|-------|-------|---------------|-----------|-----------------------|
| - | - | 38 | Dimmer 2 | 000 ⇄ 255 | 0–100% |
| - | - | 39 | Fine dimmer 2 | 000 ⇄ 255 | Fine control (16-bit) |
| 28 | 38 | 40 | Red 2 | 000 ⇄ 255 | 0–100% |
| - | 39 | 41 | Fine red 2 | 000 ⇄ 255 | Fine control (16-bit) |
| 29 | 40 | 42 | Green 2 | 000 ⇄ 255 | 0–100% |
| - | 41 | 43 | Fine green 2 | 000 ⇄ 255 | Fine control (16-bit) |
| 30 | 42 | 44 | Blue 2 | 000 ⇄ 255 | 0–100% |
| - | 43 | 45 | Fine blue 2 | 000 ⇄ 255 | Fine control (16-bit) |
| - | - | 46 | Dimmer 3 | 000 ⇄ 255 | 0–100% |
| - | - | 47 | Fine dimmer 3 | 000 ⇄ 255 | Fine control (16-bit) |
| 31 | 44 | 48 | Red 3 | 000 ⇄ 255 | 0–100% |
| - | 45 | 49 | Fine red 3 | 000 ⇄ 255 | Fine control (16-bit) |
| 32 | 46 | 50 | Green 3 | 000 ⇄ 255 | 0–100% |
| - | 47 | 51 | Fine green 3 | 000 ⇄ 255 | Fine control (16-bit) |
| 33 | 48 | 52 | Blue 3 | 000 ⇄ 255 | 0–100% |
| - | 49 | 53 | Fine blue 3 | 000 ⇄ 255 | Fine control (16-bit) |
| - | - | 54 | Dimmer 4 | 000 ⇄ 255 | 0–100% |
| - | - | 55 | Fine dimmer 4 | 000 ⇄ 255 | Fine control (16-bit) |
| 34 | 50 | 56 | Red 4 | 000 ⇄ 255 | 0–100% |
| - | 51 | 57 | Fine red 4 | 000 ⇄ 255 | Fine control (16-bit) |
| 35 | 52 | 58 | Green 4 | 000 ⇄ 255 | 0–100% |
| - | 53 | 59 | Fine green 4 | 000 ⇄ 255 | Fine control (16-bit) |
| 36 | 54 | 60 | Blue 4 | 000 ⇄ 255 | 0–100% |
| - | 55 | 61 | Fine blue 4 | 000 ⇄ 255 | Fine control (16-bit) |
| - | - | 62 | Dimmer 5 | 000 ⇄ 255 | 0–100% |
| - | - | 63 | Fine dimmer 5 | 000 ⇄ 255 | Fine control (16-bit) |
| 37 | 56 | 64 | Red 5 | 000 ⇄ 255 | 0–100% |
| - | 57 | 65 | Fine red 5 | 000 ⇄ 255 | Fine control (16-bit) |
| 38 | 58 | 66 | Green 5 | 000 ⇄ 255 | 0–100% |
| - | 59 | 67 | Fine green 5 | 000 ⇄ 255 | Fine control (16-bit) |
| 39 | 60 | 68 | Blue 5 | 000 ⇄ 255 | 0–100% |
| - | 61 | 69 | Fine blue 5 | 000 ⇄ 255 | Fine control (16-bit) |
| - | - | 70 | Dimmer 6 | 000 ⇄ 255 | 0–100% |
| - | - | 71 | Fine dimmer 6 | 000 ⇄ 255 | Fine control (16-bit) |
| 40 | 62 | 72 | Red 6 | 000 ⇄ 255 | 0–100% |
| - | 63 | 73 | Fine red 6 | 000 ⇄ 255 | Fine control (16-bit) |
| 41 | 64 | 74 | Green 6 | 000 ⇄ 255 | 0–100% |
| - | 65 | 75 | Fine green 6 | 000 ⇄ 255 | Fine control (16-bit) |
| 42 | 66 | 76 | Blue 6 | 000 ⇄ 255 | 0–100% |
| - | 67 | 77 | Fine blue 6 | 000 ⇄ 255 | Fine control (16-bit) |
| - | - | 78 | Dimmer 7 | 000 ⇄ 255 | 0–100% |
| - | - | 79 | Fine dimmer 7 | 000 ⇄ 255 | Fine control (16-bit) |
| 43 | 68 | 80 | Red 7 | 000 ⇄ 255 | 0–100% |
| - | 69 | 81 | Fine red 7 | 000 ⇄ 255 | Fine control (16-bit) |
| 44 | 70 | 82 | Green 7 | 000 ⇄ 255 | 0–100% |
| - | 71 | 83 | Fine green 7 | 000 ⇄ 255 | Fine control (16-bit) |

| 64CH | 111CH | 135Ch | Function | Value | Percent/Setting |
|------|-------|-------|--------------------|-----------|-----------------------|
| 45 | 72 | 84 | Blue 7 | 000 ⇄ 255 | 0–100% |
| – | 73 | 85 | Fine blue 7 | 000 ⇄ 255 | Fine control (16-bit) |
| – | – | 86 | Dimmer 8 | 000 ⇄ 255 | 0–100% |
| – | – | 87 | Fine dimmer 8 | 000 ⇄ 255 | Fine control (16-bit) |
| 46 | 74 | 88 | Red 8 | 000 ⇄ 255 | 0–100% |
| – | 75 | 89 | Fine red 8 | 000 ⇄ 255 | Fine control (16-bit) |
| 47 | 76 | 90 | Green 8 | 000 ⇄ 255 | 0–100% |
| – | 77 | 91 | Fine green 8 | 000 ⇄ 255 | Fine control (16-bit) |
| 48 | 78 | 92 | Blue 8 | 000 ⇄ 255 | 0–100% |
| – | 79 | 93 | Fine blue 8 | 000 ⇄ 255 | Fine control (16-bit) |
| – | – | 94 | Dimmer 9 | 000 ⇄ 255 | 0–100% |
| – | – | 95 | Fine dimmer 9 | 000 ⇄ 255 | Fine control (16-bit) |
| 49 | 80 | 96 | Red 9 | 000 ⇄ 255 | 0–100% |
| – | 81 | 97 | Fine red 9 | 000 ⇄ 255 | Fine control (16-bit) |
| 50 | 82 | 98 | Green 9 | 000 ⇄ 255 | 0–100% |
| – | 83 | 99 | Fine green 9 | 000 ⇄ 255 | Fine control (16-bit) |
| 51 | 84 | 100 | Blue 9 | 000 ⇄ 255 | 0–100% |
| – | 85 | 101 | Fine blue 9 | 000 ⇄ 255 | Fine control (16-bit) |
| – | – | 102 | Dimmer 10 | 000 ⇄ 255 | 0–100% |
| – | – | 103 | Fine dimmer 10 | 000 ⇄ 255 | Fine control (16-bit) |
| 52 | 86 | 104 | Red 10 | 000 ⇄ 255 | 0–100% |
| – | 87 | 105 | Fine red 10 | 000 ⇄ 255 | Fine control (16-bit) |
| 53 | 88 | 106 | Green 10 | 000 ⇄ 255 | 0–100% |
| – | 89 | 107 | Fine green 10 | 000 ⇄ 255 | Fine control (16-bit) |
| 54 | 90 | 108 | Blue 10 | 000 ⇄ 255 | 0–100% |
| – | 91 | 109 | Fine blue 10 | 000 ⇄ 255 | Fine control (16-bit) |
| – | – | 110 | Dimmer 11 | 000 ⇄ 255 | 0–100% |
| – | – | 111 | Fine dimmer 11 | 000 ⇄ 255 | Fine control (16-bit) |
| 55 | 92 | 112 | Red 11 | 000 ⇄ 255 | 0–100% |
| – | 93 | 113 | Fine red 11 | 000 ⇄ 255 | Fine control (16-bit) |
| 56 | 94 | 114 | Green 11 | 000 ⇄ 255 | 0–100% |
| – | 95 | 115 | Fine green 11 | 000 ⇄ 255 | Fine control (16-bit) |
| 57 | 96 | 116 | Blue 11 | 000 ⇄ 255 | 0–100% |
| – | 97 | 117 | Fine blue 11 | 000 ⇄ 255 | Fine control (16-bit) |
| – | – | 118 | Dimmer 12 | 000 ⇄ 255 | 0–100% |
| – | – | 119 | Fine dimmer 12 | 000 ⇄ 255 | Fine control (16-bit) |
| 58 | 98 | 120 | Red 12 | 000 ⇄ 255 | 0–100% |
| – | 99 | 121 | Fine red 12 | 000 ⇄ 255 | Fine control (16-bit) |
| 59 | 100 | 122 | Green 12 | 000 ⇄ 255 | 0–100% |
| – | 101 | 123 | Fine green 12 | 000 ⇄ 255 | Fine control (16-bit) |
| 60 | 102 | 124 | Blue 12 | 000 ⇄ 255 | 0–100% |
| – | 103 | 125 | Fine blue 12 | 000 ⇄ 255 | Fine control (16-bit) |
| – | – | 126 | Center dimmer | 000 ⇄ 255 | 0–100% |
| – | – | 127 | Center fine dimmer | 000 ⇄ 255 | Fine control (16-bit) |
| 61 | 104 | 128 | Center red | 000 ⇄ 255 | 0–100% |
| – | 105 | 129 | Center fine red | 000 ⇄ 255 | Fine control (16-bit) |

Operation

| 64CH | 111CH | 135Ch | Function | Value | Percent/Setting |
|------|-------|-------|-------------------|-----------|-----------------------|
| 62 | 106 | 130 | Center green | 000 ⇔ 255 | 0–100% |
| – | 107 | 131 | Center fine green | 000 ⇔ 255 | Fine control (16-bit) |
| 63 | 108 | 132 | Center blue | 000 ⇔ 255 | 0–100% |
| – | 109 | 133 | Center fine blue | 000 ⇔ 255 | Fine control (16-bit) |
| 64 | 110 | 134 | Center white | 000 ⇔ 255 | 0–100% |
| – | 111 | 135 | Center fine white | 000 ⇔ 255 | Fine control (16-bit) |

37Ch / 30Ch / 24Ch / 15Ch

| 15CH | 24CH | 30CH | 37CH | Function | Value | Percent/Setting |
|------|------|------|------|------------------------|-------------------------------|--|
| 1 | 1 | 1 | 1 | Pan | 000 ⇔ 255 | 0–100% |
| 2 | 2 | 2 | 2 | Fine pan | 000 ⇔ 255 | Fine control (16-bit) |
| 3 | 3 | 3 | 3 | Tilt | 000 ⇔ 255 | 0–100% |
| 4 | 4 | 4 | 4 | Fine tilt | 000 ⇔ 255 | Fine control (16-bit) |
| 5 | 5 | 5 | 5 | Pan/tilt speed | 000 ⇔ 255 | Fast to slow |
| 6 | – | – | – | Dimmer | 000 ⇔ 255 | 0–100% |
| 7 | – | – | – | Fine dimmer | 000 ⇔ 255 | Fine control (16-bit) |
| – | 6 | 6 | 6 | CTC | 000 001 ⇔ 255 | No function Color temperature, 19000–2700K |
| – | 7 | 7 | 7 | Ring preset color | 000 ⇔ 255 | See Preset Color Chart (no white) |
| – | 8 | 8 | 8 | Center preset color | 000 ⇔ 255 | See Preset Color Chart |
| – | 9 | 9 | 9 | Pattern | 000 001 ⇔ 255 | No function Pattern 1–255 |
| – | 10 | 10 | 10 | LED macro | 000 ⇔ 255 | See LED Macro Chart |
| – | 11 | 11 | 11 | LED macro speed | 000 ⇔ 127 128 129 ⇔ 255 | LED macro speed, fast to slow Stop Reverse LED macro, slow to fast |
| – | 12 | 12 | 12 | LED macro delay | 000 ⇔ 255 | LED macro delay, fast to slow |
| – | 13 | 13 | 13 | Background color | 000 ⇔ 255 | See Background Color Chart |
| – | 14 | 14 | 14 | Background dimmer | 000 ⇔ 255 | 0–100% |
| – | – | – | 15 | Background fine dimmer | 000 ⇔ 255 | 0–100% |
| – | 15 | 15 | 16 | Ring dimmer | 000 ⇔ 255 | 0–100% |
| – | – | 16 | 17 | Ring fine dimmer | 000 ⇔ 255 | Fine control (16-bit) |
| – | 16 | 17 | 18 | Center dimmer | 000 ⇔ 255 | 0–100% |
| – | – | 18 | 19 | Center fine dimmer | 000 ⇔ 255 | Fine control (16-bit) |
| 8 | – | – | – | Strobe | 000 ⇔ 255 | See Strobe Chart |
| – | 17 | 19 | 20 | Ring strobe | 000 ⇔ 255 | See Strobe Chart |
| – | 18 | 20 | 21 | Center strobe | 000 ⇔ 255 | See Strobe Chart |
| 9 | – | – | – | Red | 000 ⇔ 255 | 0–100% |
| 10 | – | – | – | Green | 000 ⇔ 255 | 0–100% |
| 11 | – | – | – | Blue | 000 ⇔ 255 | 0–100% |
| 12 | – | – | – | White | 000 ⇔ 255 | 0–100% |
| 13 | – | – | – | Preset color | 000 ⇔ 255 | See Preset Color Chart |
| 14 | 19 | 21 | 22 | Zoom | 000 ⇔ 255 | Zoom in to zoom out |
| 15 | 20 | 22 | 23 | Control | 000 ⇔ 255 | See Control Chart |
| – | 21 | 23 | – | Red | 000 ⇔ 255 | 0–100% |

| 15CH | 24CH | 30CH | 37CH | Function | Value | Percent/Setting |
|------|------|------|------|-------------------|-----------|-----------------------|
| - | - | 24 | - | Fine red | 000 ⇔ 255 | Fine control (16-bit) |
| - | 22 | 25 | - | Green | 000 ⇔ 255 | 0–100% |
| - | - | 26 | - | Fine green | 000 ⇔ 255 | Fine control (16-bit) |
| - | 23 | 27 | - | Blue | 000 ⇔ 255 | 0–100% |
| - | - | 28 | - | Fine blue | 000 ⇔ 255 | Fine control (16-bit) |
| - | 24 | 29 | - | White | 000 ⇔ 255 | 0–100% |
| - | - | 30 | - | Fine white | 000 ⇔ 255 | Fine control (16-bit) |
| - | - | - | 24 | Ring red | 000 ⇔ 255 | 0–100% |
| - | - | - | 25 | Ring fine red | 000 ⇔ 255 | Fine control (16-bit) |
| - | - | - | 26 | Ring green | 000 ⇔ 255 | 0–100% |
| - | - | - | 27 | Ring fine green | 000 ⇔ 255 | Fine control (16-bit) |
| - | - | - | 28 | Ring blue | 000 ⇔ 255 | 0–100% |
| - | - | - | 29 | Ring fine blue | 000 ⇔ 255 | Fine control (16-bit) |
| - | - | - | 30 | Center red | 000 ⇔ 255 | 0–100% |
| - | - | - | 31 | Center fine red | 000 ⇔ 255 | Fine control (16-bit) |
| - | - | - | 32 | Center green | 000 ⇔ 255 | 0–100% |
| - | - | - | 33 | Center fine green | 000 ⇔ 255 | Fine control (16-bit) |
| - | - | - | 34 | Center blue | 000 ⇔ 255 | 0–100% |
| - | - | - | 35 | Center fine blue | 000 ⇔ 255 | Fine control (16-bit) |
| - | - | - | 36 | Center white | 000 ⇔ 255 | 0–100% |
| - | - | - | 37 | Center fine white | 000 ⇔ 255 | Fine control (16-bit) |

Operation

Standalone Configuration

Auto Test

To have the Rogue Outcast 1 BeamWash M automatically test all functions one after the other:

1. Go to the **Run Mode** main level.
2. Select the **Auto** option.
3. The product will automatically perform test function.

Manual Mode

To run the Rogue Outcast 1 BeamWash M on Manual mode, follow the instructions below:

1. Go to the **Run Mode** main level.
2. Select the **Manual** option.
3. Select the **Crossfade (sec)** (sets the speed of scene playback in seconds), **Hold time (sec)** (Sets the time between scene playback in seconds), **Step 1** (first step that will play back), or **Step 2** (second step that will playback) options.

To program **Step 1** or **Step 2**:

1. Select an option, from **Step 1** or **Step 2**
2. Select from **Pan, Tilt, Dimmer, Shutter, Red 1, Green 1, Blue 1, Red 2, Green 2, Blue 2, Red 3, Green 3, Blue 3, Red 4, Green 4, Blue 4, Red 5, Green 5, Blue 5, Red 6, Green 6, Blue 6, Red 7, Green 7, Blue 7, Red 8, Green 8, Blue 8, Red 9, Green 9, Blue 9, Red 10, Green 10, Blue 10, Red 11, Green 11, Blue 11, Red 12, Green 12, Blue 12, Red 13, Green 13, Blue 13, White 13, or Zoom.**
3. Increase or decrease the value of the selected function, from **000–255**.
4. Repeat steps 1–3 until the product is set as desired.

To clear or delete **Step 1** or **Step 2**:

1. Select from **Clear** or **Delete**.
2. Select from **Yes** or **No**.



- **Selecting Clear will reset all manual options to 000.**
- **Selecting Delete will reset all manual options to 000 and prevent the step from playback.**

System Information

The information section of the menu displays statistics and the current status of the product's various functions. To view this information:

1. Go to the **Sys Info** main level.
2. Use **<UP>** and **<DOWN>** to view all information.

Offset Mode (Zero Adjust)

The Offset mode provides fine adjustments for the home position of the pan, tilt, and zoom movements. To adjust these options:

1. From the main level screen, press and hold **<MENU>** until the passcode screen appears.
2. Enter the passcode: **2323** and press **<ENTER>**.
3. Select the "zero" position to adjust, from **PAN, TILT, ZOOM, RDM4, RDM5, or RDM6**.

Adjust the "zero" position for the selected function from **000–255**.

Settings Configuration

Pan Reverse

To set the orientation of the pan:

1. Go to the **Setup** main level.
2. Select the **Pan Reverse** option.
3. Select from **OFF** (normal pan motion), or **ON** (reversed pan motion).

Tilt Reverse

To set the orientation of the tilt:

1. Go to the **Setup** main level.
2. Select the **Tilt Reverse** option.
3. Select from **OFF** (normal tilt motion), or **ON** (reversed tilt motion).

Pan Angle

To set the maximum angle of the pan:

1. Go to the **Setup** main level.
2. Select the **Pan Angle** option.
3. Select from **540** (540°), **360** (360°), or **180** (180°).

Tilt Angle

To set the maximum angle of the tilt:

1. Go to the **Setup** main level.
2. Select the **Tilt Angle** option.
3. Select from **260** (260°), **180** (180°), or **90** (90°).

Fan Mode

To set the fan speed mode:

1. Go to the **Settings** main level.
2. Select the **Fans** option.
3. Select the fan mode, from **Auto** (fan speed adjusts to product temperature), **Full** (fan speed at maximum), or **ECO** (quiet mode).

Display Backlight Timer

To set whether an inactive display will turn off:

1. Go to the **Setup** main level.
2. Select the **Display** option.
3. Select the length of the backlight timer, from **OFF** (will turn off) or **ON** (always on).

Screen Reverse

To set the orientation of the display:

1. Go to the **Setup** main level.
2. Select the **Screen Rev** option.
3. Select from **OFF** (right-side up) or **ON** (upside-down).

Dimmer Curve

To set the dimmer curve:

1. Go to the **Setup** main level.
2. Select the **Dimmer Curve** option.
3. Select the dimmer curve, from **Linear**, **Square**, **I Squa**, or **SCurve**.

Dimmer Speed

To set the dimmer speed:

1. Go to the **Setup** main level.
2. Select the **Dimmer Speed** option.
3. Select the dimmer speed, from **Smooth** or **Fast**.

Pulse Width Modulation

To adjust the frequency of the pulse width modulation:

1. Go to the **Setup** main level.
2. Select the **PWM Option** option.
3. Select the frequency, from **600Hz**, **1200Hz**, **2000Hz**, **4000Hz**, **6000Hz**, or **15000Hz**.

LED Power

To set the power of each LED color:

1. Go to the **Setup** main level.
2. Select from the **LED R POWER** (red), **LED G POWER** (green), **LED B POWER** (blue), or **LED W POWER** (white) options.
3. Set the selected LED power from **050–100**.

Operation

Ring Power

To set the power of each LED color:

1. Go to the **Setup** main level.
2. Select from the **RING R POWER** (red), **RING G POWER** (green), or **RING B POWER** (blue) options.
3. Set the selected LED power from **050–100**.

Red Shift

With red shift enabled, the color temperature will warm as the dimmer decreases in imitation of a lamp. To enable or disable the red shift function:

1. Go to the **Setup** main level.
2. Select the **Red Shift** option.
3. Select from **OFF** or **ON**.

White Mode

To turn the White Mode on or off, or edit the balance of the White Mode:

1. Go to the **Setup** main level.
2. Select the **White Mode** option.
3. Select **On** (to calibrate the color temperature to 7500K), **Off** (to sets all colors to maximum output), or **Custom** (to customize the White Mode).
4. If **Custom** was selected, then select which color to edit, from **RED**, **GREEN**, **BLUE**, or **WHITE**.
5. Increase or decrease the maximum output level of the selected color, from **000–255**.

Color Calibration

To alter the color calibration settings:

1. Go to the **Setup** main level.
2. Select the **Color calibration** option.
3. Select the calibration mode, from **On** (Uses factory default settings), **Off** (Sets all colors to maximum output), or **Custom** (To set a custom white balance).
4. If **Custom** was selected, then select which color to edit, from **RED**, **GREEN**, or **BLUE**.
5. Increase or decrease the maximum output level of the selected color, from **100–255**.

USB Update

To enable or disable software update using USB:

1. Go to the **Setup** main level.
2. Select the **USB Update** option.
3. Select **NO** (disables software update through USB) or **YES** (enables software update through USB).



See the [USB Update](#) section for the detailed instructions on how to update the Rogue Outcast 1 BeamWash M software using a USB C connection.

Reset Function

To reset specific functions or the entire product:

1. Go to the **Setup** main level.
2. Select the **Reset Function** option.
3. Select the functions to reset, from **Pan/Tilt**, **Zoom**, or **All**.
4. Select **NO** (to cancel) or **YES** (to reset the selected functions).

Factory Reset

To reset the product to factory settings:

1. Go to the **Setup** main level.
2. Select the **Factory Set** option.
3. Select **NO** (to cancel) or **YES** (to reset the product configuration).

Error Codes

See the table below for error codes and recommended solutions:

| Error Code | Possible Reason | Potential Solution |
|-------------------------|--------------------------------|--|
| Lamp Hot | Thermistor overheated | Do a factory reset |
| | | Update software |
| | | Check connection of head to base |
| | | Replace the thermistor |
| Thermistor Open | Bad thermistor | Factory reset |
| | | Update software |
| | | Check connection of head to base |
| | | Replace thermistor |
| Thermistor Short | Bad thermistor | Do a factory reset |
| | | Update software |
| | | Check connection of the head to the base |
| | | Replace thermistor |
| Base Fan 1 | Base Fan 1 is damaged | Replace base fan 1 |
| | Fan wires have poor connection | Check fan wire connection |
| Base Fan 2 | Base Fan 2 is damaged | Replace base fan 2 |
| | Fan wires have poor connection | Check fan wire connection |
| Head Fan 1 | Head Fan 1 is damaged | Replace head fan 1 |
| | Fan wires have poor connection | Check fan wire connection |
| Defrost Fan 1 | DEFROST FAN error | Check fan wire connection |
| | | Replace defrost fan 1 |
| Defrost Fan 2 | DEFROST FAN error | Check fan wire connection |
| | | Replace defrost fan 2 |

5. Maintenance

Marine Fixture Maintenance

Overview

Chauvet coats fixtures intended for marine environments with C5-M, C5-H, or CX paint to provide enhanced protection against damage in both inshore and offshore areas of high salinity. However, even with the enhanced protection, exposure to marine conditions may cause damage to the fixture without proper maintenance. Scratches, salt, and mineral accumulation may degrade the fixture's protective coating and expose underlying metal if not cleaned properly. In marine environments, you should inspect and clean the product's protective coating regularly to preserve the underlying metal and minimize wear on the product.

Maintenance

To preserve the coating of the product, exterior maintenance is recommended at least twice a month. To properly maintain the exterior of the product:

1. Unplug the product from power.
2. Rinse off any loose dirt.



Use a low-pressure, freshwater spray to rinse off the product. High pressure or saltwater sprays may incur damage.

3. Scrub with a soft brush to remove dust collected on the external surface/vents.
4. Rinse thoroughly.



Even if the luminaires are NOT in use, maintenance is still required due to the fixture's environment. During periods of non-use, periodically wipe the fixture with a clean, soft cloth. Only dampen this cloth with freshwater or an alcohol-based cleaner. Abrasive, alkaline, or acid cleaners may incur damage to the fixture.

5. Clean the external glass.



- **Only use an optical glass cleaner. DO NOT use Windex or other kinds of multi-surface cleaner as ammonia will damage the glass.**
- **Only spray the cleaner on a microfiber or 100% cotton cloth. DO NOT spray cleaner on the glass.**



- **Dry off this product before storing it in the case. Failure to do so may result in deterioration of the product's housing.**
- **Always dry the transparent surfaces carefully after cleaning them.**



Do not spin the cooling fans with compressed air. Damage may result.

Torque Measurements

To maintain the IP rating when reassembling the product, use the given torque measurements for each of the following screws and bolts:

| Fixture Parts | Torque Rating (Kgf.cm) | Torque Rating (lbf.in) |
|---|------------------------|------------------------|
| Screws inside feet | 9.17 | 7.96 |
| Base screws around outside (not the feet) | 15.29 | 13.27 |
| Omega bracket holder | 12.2 | 10.6 |
| Screws around power and data ports | 3.5 | 3 |
| Fuse | 7.1 | 6.19 |
| Center of yoke plate | 15.29 | 13.27 |
| Arm cover screws | 18.35 | 15.93 |
| Allen Key screws next to front lens | 25.5 | 22.1 |
| Allen Key screws around head fan | 15.29 | 13.27 |
| Allen Key screws head covers | 10.19 | 8.85 |

Vacuum Test Measurements

Use the IP Tester from Chauvet Professional to ensure the product has been reassembled correctly by following the information below:

| Parameters | Values |
|--------------------------|------------|
| Method | Positive |
| Test pressure | 2.18 kPa |
| Test duration | 60 seconds |
| PASS state leak pressure | <0.02 kPa |

Technical Specifications

6. Technical Specifications

Dimensions and Weight

| Length | Width | Height | Weight |
|-------------------|------------------|-------------------|-------------------|
| 11.92 in (303 mm) | 7.58 in (192 mm) | 15.75 in (391 mm) | 20.2 lb (9.16 kg) |

Note: Dimensions in inches are rounded.

Power

| Power Supply Type | Range | Voltage Selection |
|----------------------|--------------------------|-------------------|
| Switching (internal) | 100 to 240 VAC, 50/60 Hz | Auto-ranging |

| Parameter | 100 V, 60 Hz | 120 V, 60 Hz | 208 V, 60 Hz | 230 V, 50 Hz | 240 V, 50 Hz |
|-------------------|--------------|--------------|--------------|--------------|--------------|
| Consumption | 398 W | 385 W | 376 W | 372 W | 386 W |
| Operating Current | 3.98 A | 3.25 A | 1.92 A | 1.69 A | 1.64 A |
| Fuse/Breaker | 8 A, 250 V | 8 A, 250 V | 8 A, 250 V | 8 A, 250 V | 8 A, 250 V |

| Power Input | U.S./Worldwide | UK/Europe |
|-----------------------|------------------------------|------------------------------|
| Power Input Connector | Termination-ready bare-ended | Termination-ready bare-ended |

Light Source

| Type | Color | Quantity | Power | Current | Lifespan |
|------|-----------------|----------|-------|---------|--------------|
| LED | Quad-color RGBW | 7 | 45 W | 3 A | 50,000 hours |
| LED | Tri-color RGB | 97 | 0.2 W | 20 mA | 50,000 hours |

Photometrics

| Beam Angle | Field Angle | Cutoff Angle | Zoom Range |
|-------------|---------------|---------------|---------------|
| 3.9° to 36° | 5.9° to 49.8° | 6.7° to 55.3° | 3.9° to 55.3° |

| Illuminance @ 5 m (3.9°) | Illuminance @ 5 m (55.3°) | Color Temperature Range | Lumens-Source | Lumens-Output |
|--------------------------|---------------------------|-------------------------|---------------|---------------|
| 15,308 lux | 473 lux | 2800 to 10000 K | 5,900 | 4,073 |

Acoustics

| Settings | Idle | Auto | Full | ECO | Max |
|----------------------------------|------|------|------|------|------|
| Sound pressure level (dBA @ 1 m) | 38.8 | 41.4 | 52.2 | 40.4 | 54.5 |

Thermal

| Maximum External Temperature | Cooling System |
|------------------------------|-------------------------|
| 113 °F (45 °C) | Fan-assisted Convection |

Control

| DMX I/O Connector | Channel Range |
|-------------------|--------------------------------|
| Bare end | 15, 24, 30, 37, 64, 111 or 135 |

Ordering

| Product Name | Item Name | Item Code | UPC Number |
|-----------------------------|------------------------|-----------|--------------|
| Rogue Outcast 1 Beam Wash M | ROGUEOUTCAST1BEAMWASHM | 08012607 | 781462229559 |



UL 1573
CSA C22.2 No. 166
E113093



Contact Us

| General Information | Technical Support |
|---|--|
| Chauvet World Headquarters | |
| Address: 3360 Davie Rd., Suite 509 Davie, FL 33314 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084 | Voice: (844) 393-7575 Fax: (954) 756-8015 Email: chauvetcs@chauvetlighting.com Website: www.chauvetprofessional.com |
| Chauvet U.K. | |
| Address: Pod 1 EVO Park Little Oak Drive, Sherwood Park Nottinghamshire, NG15 0EB UK Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110 | Email: UKtech@chauvetlighting.eu Website: www.chauvetprofessional.eu |
| Chauvet Benelux | |
| Address: Vaartlaan 9 9800 Deinze Belgium Voice: +32 9 388 93 97 | Email: BNLtech@chauvetlighting.eu Website: www.chauvetprofessional.eu |
| Chauvet France | |
| Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59 | Email: FRtech@chauvetlighting.fr Website: www.chauvetprofessional.eu |
| Chauvet Germany | |
| Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20 | Email: DEtech@chauvetlighting.de Website: www.chauvetprofessional.eu |
| Chauvet Mexico | |
| Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 690-2010 | Email: servicio@chauvet.com.mx Website: www.chauvetprofessional.mx |

Warranty & Returns

For warranty terms and conditions and return information, please visit our website.

For customers in the United States and Mexico: www.chauvetlighting.com/warranty-registration.

For customers in the United Kingdom, Republic of Ireland, Belgium, the Netherlands, Luxembourg, France, and Germany: www.chauvetlighting.eu/warranty-registration.